

MX7 User's Guide

(Microsoft® Windows® CE 5.0 Equipped)



Copyright © 2008 by LXE Inc.
All Rights Reserved
E-EQ-MX70GWW-J



Language: English Notices

LXE Inc. reserves the right to make improvements or changes in the products described in this document at any time without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, LXE assumes no liability resulting from any errors or omissions in this document, or from the use of the information contained herein. Further, LXE Incorporated, reserves the right to revise this document and to make changes to it from time to time without any obligation to notify any person or organization of such revision or changes.

Copyright:

This document is copyrighted. All rights are reserved. This document may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine-readable form without prior consent, in writing, from LXE Inc.

Copyright © 2008 by LXE Inc. An EMS Technologies Company.
125 Technology Parkway, Norcross, GA 30092 U.S.A. (770) 447-4224

Trademarks:

LXE® and **Spire®** are registered trademarks of LXE Inc. **RFTerm®** is a registered trademark of EMS Technologies, Norcross, GA.

Microsoft®, **ActiveSync®**, **MSN**, **Outlook®**, **Windows®**, the Windows logo, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Summit Data Communications, Inc. **Summit Data Communications**, the Summit logo, and “The Pinnacle of Performance” are trademarks of Summit Data Communications, Inc.

Odyssey Client © Copyright 2002-2007 Funk Software, Inc. All rights reserved. **Odyssey®** and **Funk®** are registered trademarks of Funk Software, Inc. **RAM®** and **RAM Mount™** are both trademarks of National Products Inc., 1205 S. Orr Street, Seattle, WA 98108.

Java® and Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. or other countries, and are used under license.

The **Bluetooth®** word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LXE, Inc. is under license.

PowerScan is a registered trademark of Datalogic Scanning, Inc., located in Eugene, OR.

Wavelink®, the Wavelink logo and tagline, **Wavelink Studio™**, **Avalanche Management Console™**, **Mobile Manager™**, and **Mobile Manager Enterprise™** are trademarks of Wavelink Corporation, Kirkland.

RAM® and **RAM Mount™** are both trademarks of National Products Inc., 1205 S. Orr Street, Seattle, WA 98108.

All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.

When this manual is in PDF format: “**Acrobat®** **Reader®** Copyright © 2008 Adobe Systems Incorporated. All rights reserved. Adobe®, the Adobe logo, Acrobat®, and the Acrobat logo are registered trademarks of Adobe Systems Incorporated.” applies.

The user is strongly encouraged to read Appendix B, Regulatory Notices and Safety Information. Important safety cautions, warnings and regulatory information is contained in Appendix B.



Important: This symbol is placed on the product to remind users to dispose of Waste Electrical and Electronic Equipment (WEEE) appropriately, per Directive 2002-96-EC. In most areas, this product can be recycled, reclaimed and re-used when properly discarded. Do not discard labeled units with trash. For information about proper disposal, contact LXE through your local sales representative, or visit www.lxe.com.

Revision Notice

Introduction	Environmental Specifications: Added <i>IEC 60529 compliant to IP65</i> .
Quick Start	Removed references to recalibrate touch screen after every cold boot.
MX7 Hand Held Computer	Added <i>Taskbar Icons</i> . Removed <i>Mappable Diamond Keys</i> . Removed references to recalibrate touch screen after every cold boot (effective August 2008).
Appendix A – KeyMaps	Added footnote about correct keypress sequence for F21-F24 on the 55-key keypad.
Appendix B – Regulatory Notices and Safety Information	Updated approvals for 802.11a/b/g radio. Removed Summit Declaration of Compliance for consistency.

Table of Contents

INTRODUCTION	1
Overview	1
MX7 Features	2
Important Battery Information	3
Document Conventions	4
Environmental Specifications	4
Laser Warnings and Labels	5
Continuous Scan Mode	5
Components	6
Front Views	6
Back View	7
Scanner / Imager Aperture	8
AC Adapter	8
Cables	9
Handle and Handstrap	10
 QUICK START	 11
In Brief	11
Troubleshooting	12
Inserting Fully Charged Battery	13
Tapping the Power Key	14
Checking Battery Status	14
Entering the Login Name	14
Tapping the Touchscreen with a Stylus	15
Keypad Shortcuts	15
Calibrating the Touchscreen	16
Entering the AppLock Activation Key	16
Hotkey (Activation Hotkey)	16
Touch	16
Optional Accessory Installation	17
Attaching Handstrap (Optional)	17
Connecting an External Power Supply (Optional)	18
Putting it all together	18
Assembling the AC Power Adapter	18
Connecting the Multipurpose USB / Power Cable	19
Connecting the Multipurpose RS-232 / Power Cable	19
Connecting to a Printer Interface Cable	20
Connecting the Audio Cable and a Headset	20
Adjust Microphone and Secure the Cable	21
Entering Data	21
Using the 55 Key ANSI / CE Keypad	22
Using the 32-Key Numeric-Alpha Keypad	23
Entering Data	24

Using the Keypad	24
Using the Input Panel or Virtual Keyboard	24
Using the Stylus	25
Using the Integrated Barcode Scanner or Imager	26
Barcode Scanner	26
2D Imager	26
Scan Status LED	27
Tethered Scanners	27
Bluetooth Scanners and Printers	27
Voice Data	27
Input Panel – Virtual Keyboard	28
Bluetooth Devices	29
Mobile Bluetooth Accessories	29
Getting Help	30
Manuals	30
Accessories	30
MX7 Mobile Device	30
Mobile Bluetooth Barcode Readers	32
MX7 Cradles	33
 THE MX7 HAND HELD COMPUTER	 35
Reboot Sequence	35
Warm Reset	35
Cold Reset	35
Saving Changes to the Registry	35
Touchscreen Display	36
Applying the Protective Film to the Display	36
Touchscreen Calibration	37
Cleaning the Glass Display/Scan Aperture	37
Adjusting the Display Backlight	38
Set the Display Backlight Brightness	38
Set the Display Backlight Timer	38
Setting the Power Schemes Timers	39
Battery Power Scheme	39
AC Power Scheme	39
Setting The Audio Speaker Volume	40
Using the Keypad	40
Using the Touchscreen	41
The Keypads	42
Keypad Backlight	42
LED Indicators	43
System Status	43
Scan Status	43
Alpha Mode (32-key Alph Key)	43
Standard Keys	44
Function Keys	44
Sticky Keys	44
Ctl / Ctrl (Control key)	44
Alt (Alternate key)	44
Shift (Shift key)	44

Orange and Blue Keys.....	45
Field Exit.....	45
Mode Key Functions.....	45
CapsLock Mode.....	45
55-Key Keypad.....	46
32-Key Keypad.....	46
Taskbar Icons.....	46
Batteries.....	47
Main Battery.....	47
Backup Battery.....	48
Battery Hotswapping.....	48
MX7 Battery Multi-Charger.....	49
Charge a Main Battery Pack.....	49
MX7 Cradles (Optional).....	51
Suggestions / Notes.....	51
MX7 Cold Storage.....	52
Cold Storage Battery.....	52
Snowflake Decal.....	52
Heating Elements.....	53
Recharging Batteries.....	53
Normal Operation Temperature Ranges.....	53
 APPENDIX A KEY MAPS.....	 55
Introduction.....	55
55-Key Alphanumeric Keymaps.....	55
ANSI / CE Keypad.....	55
5250 Key Map for the 55-Key Keypad.....	60
32-Key Numeric-Alpha Keypad.....	61
 APPENDIX B REGULATORY NOTICES AND SAFETY INFORMATION.....	 67
MX7 Approvals/Standards.....	69
Revision History.....	76
 INDEX.....	 77

Illustrations

Figure 1 CDRH / IEC 825 Caution Label Location – MX7, Back	5
Figure 2 Caution Label – Class 2 Laser Scanner	5
Figure 3 Front Components	6
Figure 4 Back Components	7
Figure 5 Beam Aperture	8
Figure 6 AC Adapter	8
Figure 7 Cables and Adapters	9
Figure 8 Handle and Handstrap	10
Figure 9 MX7 Desktop	11
Figure 10 Main Battery Pack	13
Figure 11 Power Key Location	14
Figure 12 Touchscreen Recalibration	16
Figure 13 Attaching the Handstrap	17
Figure 14 AC/DC 12V External Power Supply	18
Figure 15 Connect the USB / Power Cable to the MX7 Port	19
Figure 16 Connect the RS-232 / Power Cable to the MX7 Port	19
Figure 17 Connect to a Printer Interface Cable	20
Figure 18 Audio Cable and Headset	20
Figure 19 The ANSI / Batch Keypad	22
Figure 20 The 32-Key Keypad	23
Figure 21 Input Panel / Virtual Keyboard	24
Figure 22 Laser Scanner Beam on Linear Barcode	26
Figure 23 Imager Bracketed Crosshair Target on 2D Barcode	26
Figure 24 Scan Status LED	27
Figure 25 Input Panel / Virtual Keyboard	28
Figure 26 Touchscreen Display	36
Figure 27 Touchscreen Recalibration	37
Figure 28 Setting the Display Backlight Timer	38
Figure 29 Volume & Sounds Properties	41
Figure 30 The 32-key and 55-key Keypads	42
Figure 31 Lithium Ion Battery Pack	47
Figure 32 MX7 Multi-Charger / Analyzer	49
Figure 33 Insert Battery Pack in Charging Pocket	50
Figure 34 MX7 Cold Storage Battery	52

Introduction

Overview

The LXE® MX7 is a rugged, portable, hand-held Microsoft® Windows® CE 5.0 equipped mobile computer capable of wireless data communications. The mobile device can transmit information using an 802.11 network card and it can store information for later transmission through an RS-232 or USB port.

The mobile device is vertically oriented and features backlighting for the display. The touch-screen display supports graphic features and Windows icons that the Windows CE 5.0 operating system supports. Keypads are available in 55-key alphanumeric and 32-key numeric-alpha versions. Also available is a 5250 55-key keypad overlay.

This device is a Windows CE 5.0 compatible computer that can be scaled from a limited function batch computer to an integrated RF scanning computer. A trigger handle is available as an accessory. The MX7 Cold Storage (MX7CS) mobile device functions normally in various temperature ranges.

The attached stylus is used to assist in entering data and configuring the mobile device. Protective film for the touchscreen is available as an accessory.

The MX7 is powered by a 2200 mAh Lithium-Ion main battery pack and an internal NiCd backup battery. The MX7 Bluetooth® module supports LXE Bluetooth printers and scanners.



Important

If the mobile device has AppLock installed, please refer to the *MX7 Reference Guide, Chapter 6 – AppLock* for setup and processing.

Wireless configuration and security parameters are described in detail in the *MX7 Reference Guide, Chapter 5 – Wireless Network Configuration*.

Related Manuals

Integrated Scanner Programming Guide – contains programming barcodes used when setting up integrated scan engines.

- **SE824, SE955 and SE1524 scanner** barcode reading parameters, refer to Chapter 2 in the *Integrated Scanner Programming Guide*. The SE955 scanner replaced the SE824 scanner on all MX7's manufactured after July 2006.
- **Intermec EV15 linear imager**, refer to Chapter 3 in the *Integrated Scanner Programming Guide*.
- **5380SF 2D imager**, refer to Chapter 4 in the *Integrated Scanner Programming Guide*.

MX7 Multicharger User's Guide – contains user, technical and troubleshooting information for the MX7 battery multi-charger.



MX7 Cradle Reference Guide – contains user, technical and troubleshooting information for the MX7 Desktop and Passive Vehicle Mounted cradles.

MX7 Features

New features affect user interaction and internal operation of the MX7.

The appropriate wireless utility for your device configuration has been pre-installed by LXE.

The desktop will display an *Odyssey Client Utility* icon or it will display a *Summit Client Utility* icon for 802.11 configuration and security.

	Odyssey 	Summit 	Optional?
Summit® Client Utility	-	x	No
Odyssey® Client Utility	x	-	No
LXE Bluetooth Printers and Scanners	-	x	Yes
400MHz	x	x	No
128MB RAM	x	x	No
128MB Flash	x	x	No
SE955 Laser Scanner	-	x	Yes
EV-15 Linear Imager	x	x	Yes
SE824 Laser Scanner	x	-	Yes
5380SF 2D Imager	-	x	Yes
CE 5.0	x	x	No
Voice	-	x	Yes
RFTerm®	x	x	Yes
JAVA®	x	x	Yes
AppLock	x	x	Yes
MX7 Cold Storage (MX7CS) mobile device	x	x	No

Note: The LXE Login Utility should be used by Odyssey Clients only.

The MX7 does not have a Bluetooth managed LED.



Important Battery Information

Note: This mobile device's backup battery maintains its charge by drawing power from the main battery pack. Always store unused devices with a fully charged main battery pack installed. LXE recommends an in-use mobile device be frequently connected to an external power source to maintain optimum power levels in the main battery pack and the backup battery. When the backup battery and main battery pack are dead, the mobile device reverts to the last saved setup defaults when a fully charged main battery pack is installed and the device is powered On again.

Tap  | **Settings** | **Control Panel** | **Battery** tab.







- Until the main battery and backup battery are completely depleted, the MX7 is always drawing power from the batteries (On).
- New batteries must be fully charged prior to use.
- Whenever possible, use the AC power adapter with the MX7 to conserve the main battery and recharge the backup battery.
- When a new battery is installed in the MX7 for the first time (or when the backup battery is completely depleted), the Time and Date reverts to its default values.
- Backup battery replacement is performed by LXE.

Tap  | **Settings** | **Control Panel** | **Date/Time** tab.

<p>CAUTION</p> 	<p>RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.</p> <p>DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.</p>
<p>ATTENTION</p> 	<p>Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.</p> <p>Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.</p>

See Also: *Section titled MX7 Cold Storage later in this guide.*

Document Conventions


ALL CAPS	All caps are used to represent disk directories, file names, and application names.
Menu Choice	Rather than use the phrase “choose the Save command from the File menu”, this guide uses the convention “choose File Save”.
“Quotes” or <i>Italics</i>	Indicates the title of a book, chapter or a section within a chapter (for example, “Document Conventions” and <i>Document Conventions</i>).
< >	Indicates a key on the keypad (for example, <Enter>).
	Indicates a reference to other documentation.
ATTENTION	Keyword that indicates vital or pivotal information to follow.
	Attention symbol that indicates vital or pivotal information to follow. Also, when marked on product, means to refer to the user’s guide.
	International fuse replacement symbol. When marked on the product, the label includes fuse ratings in volts (v) and amperes (a) for the product.
Note:	Keyword that indicates immediately relevant information.
CAUTION 	Keyword that indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
WARNING 	Keyword that indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
DANGER 	Keyword that indicates a imminent hazardous situation which, if not avoided, will result in death or serious injury.

Environmental Specifications

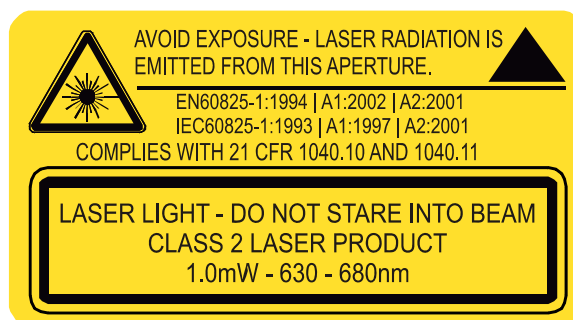
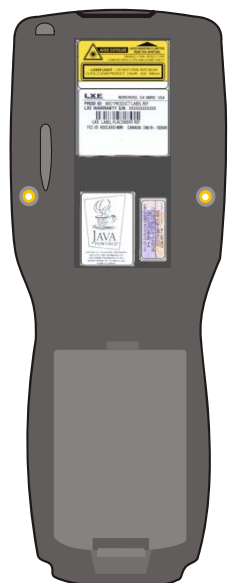
Operating Temperature	14°F to 122°F (-10°C to 50°C) [non-condensing]
Storage Temperature	-4°F to 158°F (-20°C to 70°C) [non-condensing]
Water and Dust	IEC 60529 compliant to IP65
Operating Humidity	5% to 90% non-condensing at 104°F (40°C)
Vibration	Based on MIL Std 810D
ESD	8 kV air, 4kV contact
Bluetooth Range	32.8 feet (10 meters) Direct line of sight only.

Laser Warnings and Labels

- Do not look into the laser's lens.
- Do not stare directly into the laser beam.
- Do not remove the laser caution labels from the MX7.
- Do not connect the laser barcode aperture to any other device. The laser barcode aperture is certified for use with the MX7 only.

<p>Caution:</p> 	<p>Laser radiation when open. Please read the caution labels.</p> <p>Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.</p>
--	--

Summit Client Laser Label



Odyssey Client Laser Label

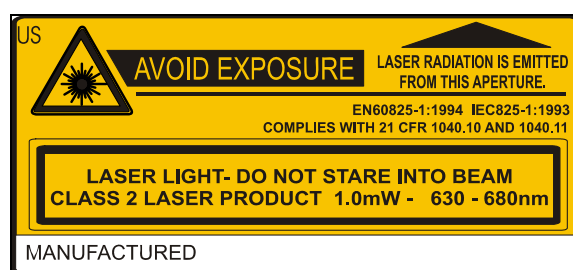


Figure 1 CDRH / IEC 825 Caution Label Location – MX7, Back

Figure 2 Caution Label – Class 2 Laser Scanner

Continuous Scan Mode

If Continuous Scan Mode has been enabled (default is disabled), the laser is always on and decoding. Refer to the *MX7 Reference Guide, Chapter 4 Scanner*. **Caution: Laser beam is emitted continuously. Do not stare into the laser beam.**

Components

Front Views

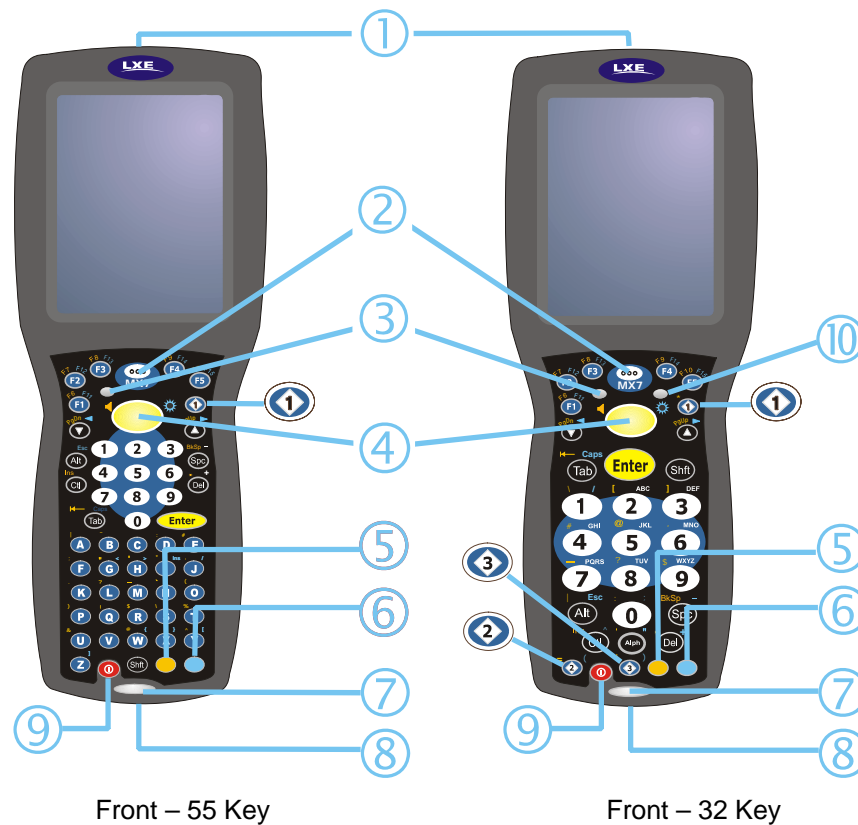



Figure 3 Front Components

- 1 Imager/Scanner Aperture
- 2 Speaker
- 3 System Status LED
- 4 Scan Button
- 5 Orange Key (Sticky Key)
- 6 Blue Key (Sticky Key)
- 7 Scan Status LED
- 8 Cable Port
- 9 On / Off Button
- 10 “Alpha” Lock LED
-  Diamond Number Keys


Back View

Figure 4 Back Components

- 1 Imager/Scanner Aperture
- 2 Stylus and stylus holder
- 3 Trigger Handle Attach Points
and
Handstrap Retainer Bracket Attach Points
- 4 Main Battery
- 5 Battery Fastener
- 6 Cable Ports

Scanner / Imager Aperture

CAUTION: *Never stare directly into the beam aperture. Read the previous section Laser Warnings and Labels before using the scanner/imager.*

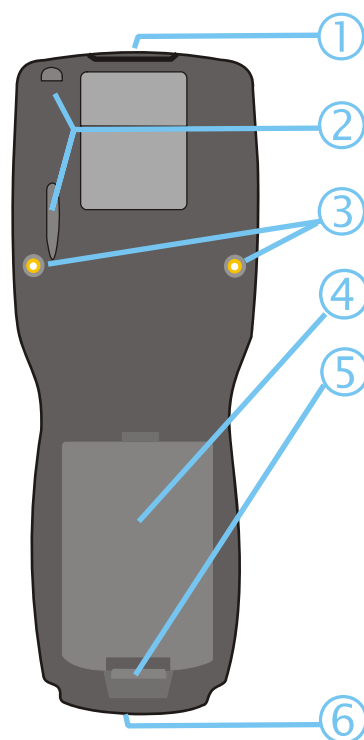

Figure 5 Beam Aperture

Identify the type of integrated imager or laser scanner installed in the MX7 by looking at the type of plastic lens covering the Beam aperture.

- The laser barcode scanner has a red lens protecting the laser engine.
- The No-Scanner option has an opaque lens protecting the MX7 internal components.
- The EV-15 integrated imager has a clear lens protecting the imager engine.
- The 5380SF 2D imager has an opaque lens protecting the imager engine.

AC Adapter



AC Adapter



AC Power Cable




Figure 6 AC Adapter

The LXE-approved AC Power Adapter is only intended for use in a 25°C (77°F) maximum ambient temperature environment.

Cables


Cable: Multipurpose RS-232 and Power MX7A055MULTICBLDA9F	
Cable: Multipurpose USB and Power MX7A052MULTICBLUSB	
Adapter/Cable : Audio MX7A060ADPTCBLVOICE	
Adapter: RS-232 PC port to D9 male MX7A058ADPTCBLPER	

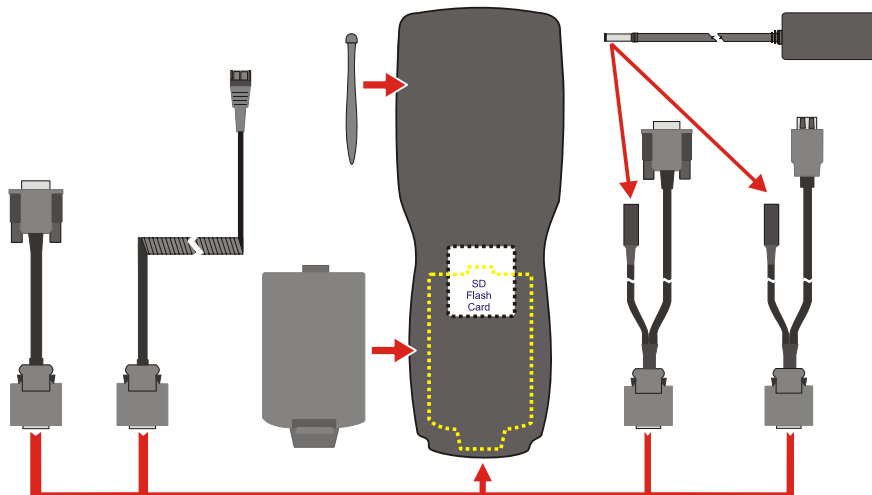Figure 7 Cables and Adapters



Note: Tethered scanners connected to the MX7 I/O port are not supported by LXE. Tethered scanners connected to the MX7 Cradle I/O ports are supported by LXE.

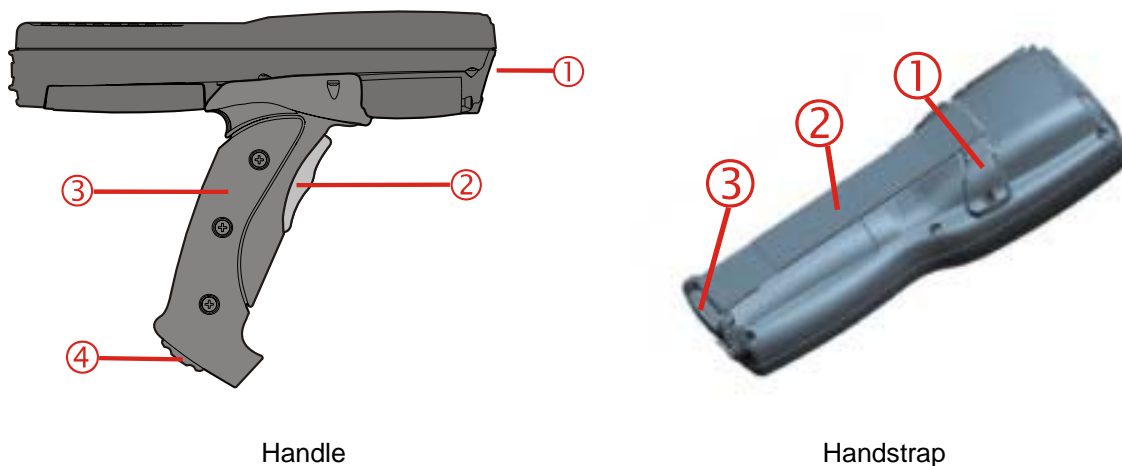Handle and Handstrap



Handle

Handstrap

Figure 8 Handle and Handstrap

1	Imager/Scanner Aperture	1	Handstrap Retainer Bracket
2	Trigger	2	Handstrap
3	Handle	3	Handstrap Clip
4	Tether Attach Point		

Note: Either the trigger handle is attached to the MX7 or the handstrap is attached, not both. LXE recommends that, in the absence of a trigger handle, the handstrap be used at all times.

LXE pre-installs the handstrap when the MX7 is purchased without a trigger handle.

Quick Start


In Brief . . .

Note: When your mobile device is pre-configured, the client, keypad and scan aperture configurations are assembled by LXE to your specifications. The desktop will display an Odyssey Client Utility icon or it will display a Summit Client Utility icon.

This section's instructions are based on the assumption that your new device is pre-configured and requires only accessory installation (e.g. stylus) and a power source. LXE recommends that installation or removal of accessories be performed on a clean, well-lit surface. When necessary, protect the work surface, the mobile device, and components from electrostatic discharge.


This guide takes you through an introduction to and operation of the MX7.

1. Insert a fully charged main battery pack. (Always put a fully charged battery in the mobile device at the beginning of the shift or workday.)
2. Connect an external power source to the unit (if required).
3. If the screen does not automatically display, tap the Power key.
4. Calibrate the touchscreen (OS versions released before August 2008 only).
5. A white screen will appear during the boot process until all CAB files and applications are loaded and installed. Radio setup screens may appear and disappear while files are loading. After all files are loaded and the Desktop is displayed, adjust audio volume and other parameters if desired.

If needed, change the Time and Date from it's default value by tapping the  | **Settings** | **Control Panel** | **Date/Time** icon.



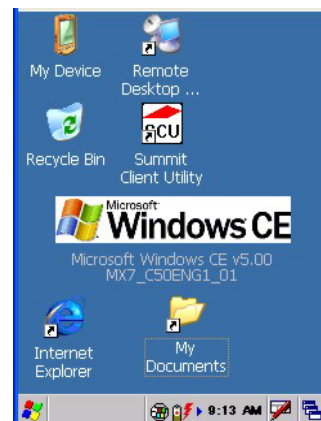MX7 with Odyssey Client




MX7 with Summit Client



Figure 9 MX7 Desktop

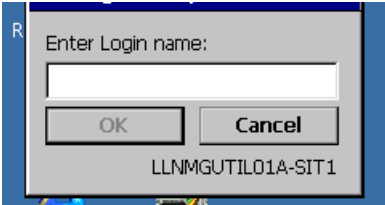Based on your installed software version and hardware options, your system may not be exactly the same as the system described in this guide. Contact your LXE representative for information on the latest upgrades for your MX7.

Troubleshooting

<p>Can't calibrate the touch screen, change the date/time or adjust the volume.</p>	<p>AppLock is installed and running on the mobile device. AppLock restricts User access to running programs. Changes or modifications require Administrator access.</p> <p>Refer to AppLock in the <i>MX7 Reference Guide</i> for setup and processing information.</p>	
<p>RFterm opens and runs upon each cold reset and warm reset.</p>	<p>Tap File Exit to close the RFterm application.</p>	
<p>The Login utility waits for a login name before the MX7 can continue.</p> <p>Refer to the MX7 Reference Guide for complete information.</p>		<p>If the LXE Login Utility has been installed, a login screen is presented to the user after a return from Suspend, a warm reset and a cold reset. Type the login name and tap OK to continue. Tap Cancel to use the previously entered user name.</p> <p>Note: This option should only be used by Odyssey Clients.</p>
<p>The MX7 seems to lockup as soon as it is warm booted.</p>	<p>There may be small delays while the wireless client connects to the network, authorization for Voxware-enabled applications complete, Wavelink Avalanche management of the MX7 startup completes, and Bluetooth relationships establish or re-establish..</p>	

Inserting Fully Charged Battery

CAUTION 	RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
ATTENTION 	Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Note: The unit will not function unless the main battery pack is in place and securely latched. Be sure to place the mobile device in Suspend before removing the battery. Failing to properly place the device in Suspend mode will result in a loss of all unsaved data.



Figure 10 Main Battery Pack

The main battery is located in a compartment on the back of the unit. To insert or replace the battery, complete the following steps:

1. Place the MX7 in Suspend mode.
2. Detach the bottom hook of the handstrap (if installed).
3. Press the battery locking tab up to release the main battery pack. The battery case serves as the back cover for the battery well for the MX7.
4. Pull the battery up and out of the battery well with a hinge motion. Place the discharged battery pack in a powered battery charger/analyzer.
5. Tilt the end (without the latch) of the fully charged battery pack into the upper end of the battery compartment, and firmly press the other end (with the latch) until it is fully inserted into the battery compartment.
6. Push down on the battery pack until it clicks into place.
7. Replace the handstrap clip in its holder.

Note: The battery should not be replaced in a dirty, harsh or hazardous environment. When the battery is out of the MX7, any dust or moisture that enters the battery compartment can get into the main unit, potentially causing damage.

Tapping the Power Key

Note: Refer to the section titled **Power Modes** in the **MX7 Reference Guide** for information relating to the power states of the MX7.

Important: Until the main battery and backup battery are completely depleted, the MX7 is always drawing power from the batteries (On).

When a battery is inserted in the MX7 for the first time press the Power key.

Tapping the Power key places the MX7 immediately in Suspend mode.

Tapping the Power key again immediately returns the MX7 from Suspend.

or

Tap  | **Suspend**.

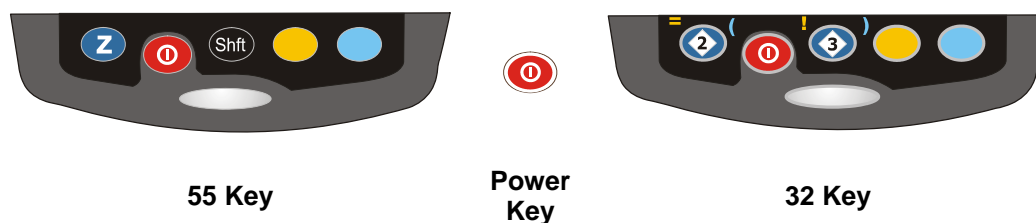



Figure 11 Power Key Location

See section *LED Indicators* and *System Status LED* later in this guide.


Checking Battery Status

Tap the  | **Settings** | **Control Panel** | **Battery** icon. Main battery level, backup battery level, status and other details are displayed.

Entering the Login Name

Note: This option should only be used by Odyssey Clients.

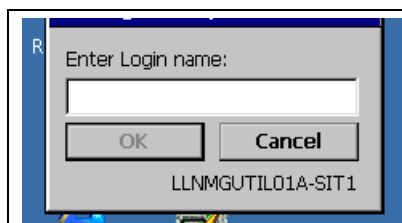If the LXE Login Utility has been installed, the following screen is presented to the user after a return from Suspend, a warm reset and a cold reset.



There are three options:

Type the login name and tap OK to continue.

Tap Cancel to use the previously entered user name.

Enter a new login name and tap OK to continue.

Tapping the Touchscreen with a Stylus

Note: Always use the point of the stylus for tapping or making strokes on the touchscreen. Never use an actual pen, pencil, or sharp/abrasive object to write on the touchscreen. If the tip of the stylus is dirty, clean the tip with a water moistened cloth before touching the screen with the stylus.

Hold the stylus as if it were a pen or pencil. Touch an element on the screen with the tip of the stylus then remove the stylus from the screen. Firmly press the stylus into the stylus holder when the stylus is not in use.

Like using a mouse to left-click icons on a desktop computer screen, using the stylus to tap icons on the touchscreen is the basic action that can:

- Open applications
- Choose menu commands
- Select options in dialog boxes or drop-down boxes
- Drag the slider in a scroll bar
- Select text by dragging the stylus across the text
- Place the cursor in a text box prior to typing in data or retrieving data using the Scan button or an input/output device connected to the serial port.

A stylus replacement kit containing 10 stylus' can be ordered from LXE. See the section titled *Accessories* for the stylus replacement kit part number.

Note: A “right mouse click” function must be programmed by the customer to accept a constant stream of left mouse click messages. An application can choose to interpret this stream of messages as a right mouse click. LXE does not support non-LXE application programming.

Keypad Shortcuts

Use keyboard shortcuts instead of the stylus:

- Press <Tab> and an <Arrow> key to select a file.
- Press <Shift> and an <Arrow> key to select several files.
- Once you've selected a file, press <Alt> then press <Enter> to open its Properties dialog.
- Press to delete a file.
- To force the Start menu to display, press <Ctl> and release, press <Blue> and release, then press <Esc> (the Alt key).

Calibrating the Touchscreen

If the touchscreen is not responding properly to stylus taps, you may need to recalibrate the touchscreen. Recalibration involves tapping the center of a target. If you miss the center, keep the stylus on the screen, slide it over the target's center, and then lift the stylus.

If the touchscreen is not accepting taps or needs recalibration, press <Ctrl>+<Esc> to force the Start Menu to appear.

To recalibrate the screen, select  | **Settings** | **Control Panel** | **Stylus** | **Calibration** tab.

To begin, tap the Recalibrate button on the screen with the stylus.

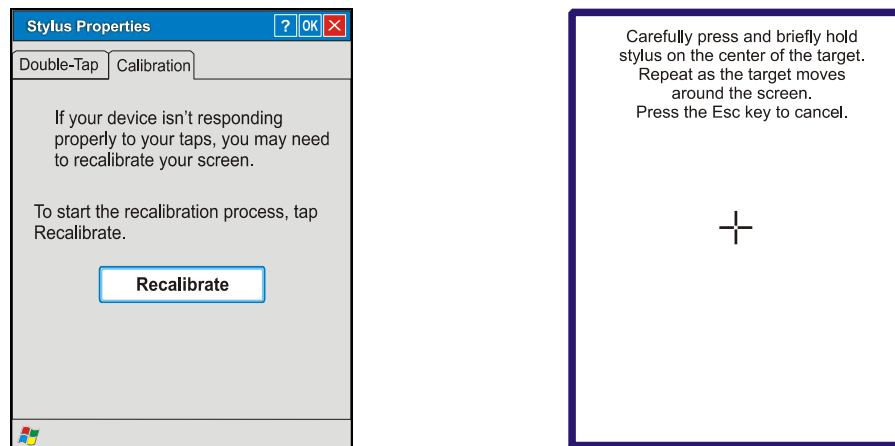


Figure 12 Touchscreen Recalibration

Follow the instructions on the screen and press the Enter key to save the new calibration settings or press Esc to cancel or quit.

Entering the AppLock Activation Key

Hotkey (Activation Hotkey)

If the mobile device uses LXE's Multi AppLock to allow the user to switch between applications, the default Activation key is **Ctrl+Spc**. The key sequence switches the focus between one application and another. Data entry affects the application running in the foreground only. *Note that the system administrator may have assigned a different key sequence to use when switching applications.*

Touch

Note: The touch panel must be enabled.

Tap the Switchpad taskbar icon to place the popup menu on screen. Tap one of the application names in the popup menu. The selected application is brought to the foreground while the other application continues to run in the background. Stylus taps affect the application running in the foreground only.

Optional Accessory Installation

Attaching Handstrap (Optional)

Note: Either the trigger handle is attached to the MX7 or the handstrap is attached, not both. LXE recommends that, in the absence of a trigger handle, the handstrap be used at all times. LXE pre-installs the handstrap on devices that are purchased without a trigger handle. Refer to the MX7 Reference Guide for trigger handle instruction.

Once installed, the handstrap provides a means for the user to secure the computer to their hand. It is adjustable to fit practically any size hand and does not interfere with the multipurpose cable, if connected, when the mobile device is in a cradle.



Figure 13 Attaching the Handstrap

- 1 Handstrap Retainer Bracket
- 2 Handstrap
- 3 Handstrap Clip

Tool Required: #1 Phillips Screwdriver (not supplied by LXE)

Installation

1. Place the MX7, with the screen facing down, on a flat stable surface.
2. Attach the handstrap retainer bracket to the MX7 with the screws provided.
3. Slip the Handstrap Clip into the bracket at the base of the MX7.
4. Making sure the closed loop fastener surfaces on the handstrap are facing up, slide the strap through the pin in the retainer bracket and the clip.
5. Fold each end of the the strap over so that the closed loop fastener surfaces mate evenly.
6. Test the strap's connection making sure the MX7 is securely connected to each end of the strap connectors.

Check the closed loop fastener, retainer bracket and clip connections frequently. If they have loosened, they must be tightened before the MX7 is placed into service again.

Connecting an External Power Supply (Optional)

The MX7 receives AC/DC power from the AC/DC 12V Power Supply. The MX7 external power connection is part of the RS-232 cable assembly and the USB cable assembly.

Putting it all together

To apply external power to the MX7 follow the steps below in sequence.

1. Plug the 3 prong adapter cable end of the external power module into an AC power source (e.g. wall outlet).
2. Squeeze the sides of the power connector and push the MX7 power cable connector into the MX7 I/O port until it clicks. The click means the connector is seated firmly.
3. Press the power cable connector pin from the power adapter into the connector on the (USB/Power or RS-232/Power) cable attached to the base of the MX7. AC power is now being supplied to the MX7.

The System LED above the Scan key illuminates when the MX7 is charging the main battery pack using external power through the power cable. The backup battery is always being trickle charged by the main battery pack..

Whenever possible, use the AC power adapter with the MX7 to conserve the main battery power and maintain a charge in the backup battery.

Assembling the AC Power Adapter

The LXE-approved AC Power Adapter is only intended for use in a 25°C (77°F) maximum ambient temperature environment.

If the AC power cable is not included with the AC Adapter, please contact your LXE representative for assistance.



Figure 14 AC/DC 12V External Power Supply

Plug the 3-prong cable into an AC wall outlet. Firmly press the female end of the power cable into the male connector on the power adapter. AC power is now being supplied to the power adapter. See *Accessories* for the LXE part number for the AC Power Adapter to use with the MX7.

Connecting the Multipurpose USB / Power Cable



Figure 15 Connect the USB / Power Cable to the MX7 Port

- Connector A Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX7. Release the clips in the connector cable. Test the connection for stability before connecting the B or C connector.
- Connector B Plug the 3-prong cable into an AC wall outlet. Firmly push the power cable connector pin into connector B until you hear a slight click.
- Connector C Insert the USB Type A plug into an appropriate USB port on a desktop/laptop computer for ActiveSync communication.

Connecting the Multipurpose RS-232 / Power Cable

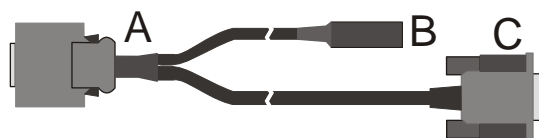


Figure 16 Connect the RS-232 / Power Cable to the MX7 Port

- Connector A Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX7. Release the clips in the connector cable. Test the connection for stability before connecting the B or C connector.
- Connector B Plug the 3-prong cable into an AC wall outlet. Firmly push the power cable connector pin into connector B until you hear a slight click.
- Connector C Align the RS-232 serial cable end carefully to an appropriate serial port on a desktop/laptop computer for ActiveSync communication. Press the ends together and hand tighten the screws on either side of the serial cable until the MX7 is securely connected to the serial device.

Connecting to a Printer Interface Cable



Figure 17 Connect to a Printer Interface Cable

- Connector A** Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX7. Release the clips in the connector cable. Test the connection for stability before connecting the B or C connector.
- Connector B** Align the RS-232 serial cable end carefully to the serial port on the cable from the printer. Press the ends together and hand tighten the screws on either side of the serial cable until it is securely connected to the printer cable.

Connecting the Audio Cable and a Headset

See section titled *Set the Audio Speaker Volume*.

Note: The audio option draws power from the main battery.

The headset consists of an earpiece, a microphone and an attached cable. The headset attaches to the audio cable which attaches to the MX7.



Figure 18 Audio Cable and Headset

- Connector A** Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX7. Release the clips in the connector cable. Test the connection for stability before connecting the B connector.
- Connector B** Align Connector B and the headset quick connect cable end. Firmly push the cable ends together until they click and lock in place.

Adjust Microphone and Secure the Cable

Do not twist the microphone boom when adjusting the microphone.

The microphone should be adjusted to be about two finger widths from your mouth.

Make sure the microphone is pointed at your mouth. Note the small “Talk” label near the mouthpiece. Make sure the Talk label is in front of your mouth.

The microphone cable can be routed over or under clothing.

Under Clothing

- Leave the cable exposed only at the top of the collar.
- Be sure to leave a small loop of cable to allow movement of your head.

Over Clothing

- Use clothing clips to hold the cable close to your body.
- Tuck the cable under the belt, but leave a small loop where it goes under the belt.
- Do not wear the cable on the front of your body. It may get in your way or get caught on protruding objects.

Entering Data

Data is entered into the MX7 by speaking into the headset’s microphone when prompted.

Please contact your System Administrator if assistance is needed with the voice software installed on your MX7.

Using the 55 Key ANSI / CE Keypad

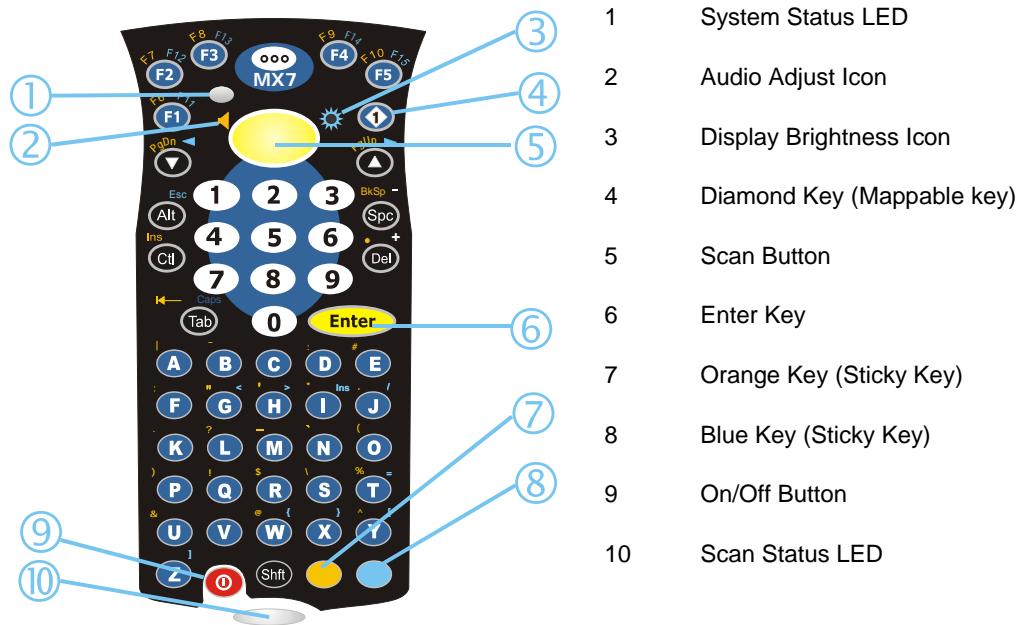


Figure 19 The ANSI / Batch Keypad

- When using a sequence of keys that includes a sticky key, press the sticky key first, release it, then press the rest of the key sequence.
- When using a sequence of keys that includes the Orange or Blue keys, press the color key first then the rest of the key sequence.
- Alphabetic keys default to lower case letters. Press the Shift key, then the alphabetic key for an uppercase letter.
- When the computer boots, the default condition of Caps (or CapsLock) is Off. The Caps (or CapsLock) condition can be toggled with Blue plus Tab key sequence.

Using the 32-Key Numeric-Alpha Keypad

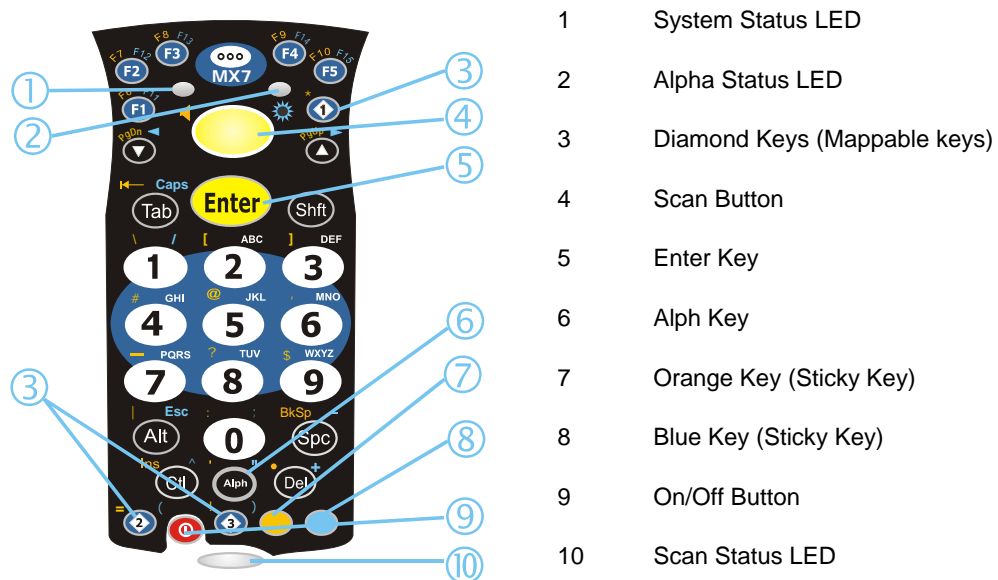


Figure 20 The 32-Key Keypad

- When using a sequence of keys that require an alpha key, first press the Alph key. Use the Shift sticky key or the Caps key sequence (Blue+Tab) for upper case alphabetic characters.
- Pressing the Alph key forces “Alpha” mode for the 2,3,4,5,6,7,8, and 9 keys. The 1 and 0 keys continue to place a 1 and 0 into the text field.
- To create a combination of numbers and letters before pressing Enter, remember to tap the Alph key to toggle between Alpha and Numeric mode.
- When using a sequence of keys that do not include the Alph key but does include a sticky key, press the sticky key first then the rest of the key sequence.

Entering Data

You can enter data into the MX7 through several different methods. The scan aperture provides barcode data entry, the I/O port is used to input/output data, and the keypad provides manual entry.

Mobile devices with a touchscreen use a stylus to input data, the I/O port and/or the keypad. An input panel (virtual keyboard) is available in applications that expect keyed input.

Using the Keypad

The keypad is used to manually input data that is not collected otherwise. Almost any function that a full sized computer keyboard can provide is duplicated on the MX7 keypads but it may take a few more keystrokes to accomplish a keyed task. Please refer to *Appendix A – Key Maps* for instruction on the specific keypresses to access all keypad functions.

Almost every key has two or three different functions. The primary alpha or numeric character is printed on the key.

The Orange or Blue keys are pressed when you want to use a “sticky” key function. For example, when you press a Blue or Orange key (the sticky key), then press the key that has the desired second-function key, the second-function key is the “active” key. The specific sticky character is printed above the corresponding key in either Orange or Blue.

Using the Input Panel or Virtual Keyboard

The virtual keyboard is always available when needed e.g. text field input. Tap the keyboard icon at the bottom of the screen to put the virtual keyboard on the display. Using the stylus:

- Tap the Shift key to type one capital letter.
- Tap the CAPS key to type all capital letters.
- Tap the au key to access symbols.

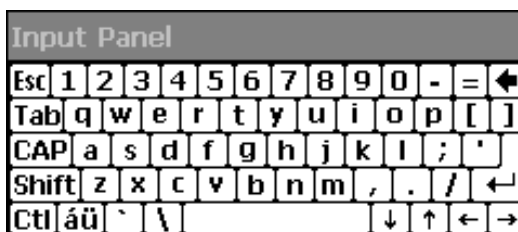


Figure 21 Input Panel / Virtual Keyboard

Some applications do not automatically display the Input Panel. In this case, do the following to use the Input Panel:

1. Tap the Input Panel/Virtual Keyboard icon in the taskbar.
2. Select **Keyboard** from the menu.
3. Tap the data entry area on the display when you want to enter data using the Input Panel.

Using the Stylus

Note: This section is directed to the MX7 daily user. The assumption is that the mobile device has been configured and the touch panel calibrated by the System Administrator prior to releasing the MX7 for daily use.

The stylus performs the same function as the mouse that is used to point to and click elements on a desktop computer. The stylus is used in the same manner as a mouse – single tap or double tap to select menu options, drag the stylus across text to select, hold the stylus down to activate slider bars, etcetera.

Hold the stylus as if it were a pen or pencil. Touch an element on the screen with the tip of the stylus then remove the stylus from the screen. The touch screen responds to an actuation force (touch) of 4 oz. (or greater) of pressure.

The stylus can be used in conjunction with the keyboard and Scan button and an input/output device connected to the serial port.

- Touch the stylus to the field of the data entry form to receive the next data feed.
- The cursor begins to flash in the field.
- The unit is ready to accept data from either the physical keypad, virtual keyboard, or the integrated scanner / imager.

Note: Always use the point of the stylus for tapping or making strokes on the display. Never use an actual pen, pencil or sharp object to write on the touch screen.

Using the Integrated Barcode Scanner or Imager

Use the integrated laser scanner to scan linear barcodes.

Use the 5380SF integrated imager to scan 2D barcodes.

Barcode Scanner

Read all cautions, warnings and labels **before using the laser scanner.**

**Do not look into the laser's lens.
Do not stare directly into the laser beam.**

To scan with the integrated laser barcode reader, point the scan aperture towards a barcode and press the Scan button. You will see a red beam strike the barcode. Align the beam so that the barcode is centered within the beam. The laser beam must cross the entire barcode. Move the MX7 towards or away from the barcode so that the barcode takes up approximately two-thirds the width of the beam.

There may be a tactile response combined with the Scan functions.

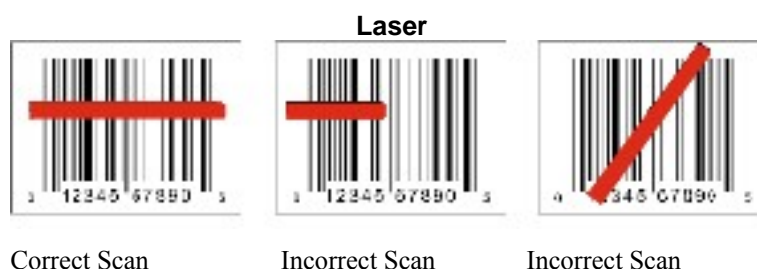


Figure 22 Laser Scanner Beam on Linear Barcode

2D Imager



Figure 23 Imager Bracketed Crosshair Target on 2D Barcode

To scan with the integrated imager, point the scan aperture towards a 2D barcode and press the Scan button. You will see a bracketed crosshair strike the barcode. Align the brackets so that the center of the barcode is covered by the crosshair.

Move the MX7 towards or away from the barcode until a response is received by the MX7 (beep, tactile response, etc) or the bracketed crosshair times out and disappears.

Scan Status LED

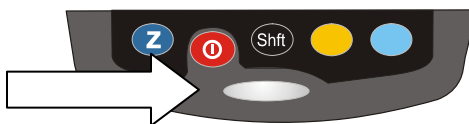


Figure 24 Scan Status LED

The Scan Status LED (oval shaped LED below keypad) turns red when the laser beam is on. Following a barcode scan and read the Scan Status LED turns green for two seconds and the MX7 beeps or vibrates, indicating a successful scan. If the scan was unsuccessful, the Scan Status LED turns off and a different beep sequence (or vibration) is heard.

The laser engine and Scan Status LED automatically turn off after a successful or unsuccessful read. The scanner / imager is ready to scan again after the Scan key (or trigger on the handle if installed) is released, or after the Scan Status LED turns off following a successful scan.

The Scan Status LED turns amber when scanner/imager programming changes, if any, are being saved. When the LED is off, the MX7 is ready to scan again.

Tethered Scanners

Tethered scanners cabled to the MX7 I/O port are not supported by LXE.

Tethered scanners cabled to the MX7 Desktop Cradle I/O port are supported by LXE, see the *MX7 Cradle Reference Guide* for instruction.

Bluetooth Scanners and Printers

Bluetooth scanners are paired to the MX7 wirelessly using the MX7 Bluetooth wireless client.

See section *Bluetooth Devices* for more information.

Only LXE Bluetooth scanners and LXE Bluetooth printers are supported by LXE. See *Accessories*.

Voice Data

Data is entered into the MX7 by speaking into the headset's microphone when prompted. Please contact your System Administrator if assistance is needed with the voice software.

Input Panel – Virtual Keyboard

The virtual keyboard is always available when needed e.g. text field input. Tap the keyboard icon at the bottom of the screen to put the virtual keyboard on the display. Using the stylus:

- Tap the Shift key to type one capital letter.
- Tap the CAPS key to type all capital letters.
- Tap the au key to access symbols.

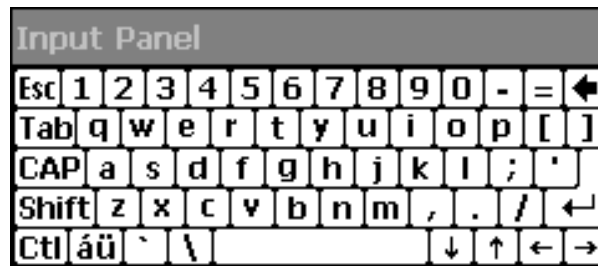


Figure 25 Input Panel / Virtual Keyboard

Some applications do not automatically display the Input Panel. In this case, do the following to use the Input Panel:

1. Tap the Input Panel/Virtual Keyboard icon in the taskbar.
2. Select **Keyboard** from the menu.
3. Tap the data entry area on the display when you want to enter data using the Input Panel.

Bluetooth Devices

Assumption: The System Administrator has Discovered and Paired targeted Bluetooth devices for each MX7. The System Administrator has also enabled / disabled Bluetooth settings and assigned a Computer Friendly Name for each MX7. See the *MX7 Reference Guide* for information and instruction on the MX7, Bluetooth control panel applet and supported LXE Bluetooth printers and scanners.

The Bluetooth taskbar Icon state and Bluetooth scanner LED states change as Bluetooth devices are discovered, pair, connect and disconnect. There may be audible or visual signals as paired devices re-connect with the MX7. Only LXE Bluetooth printers or scanners are recognized and displayed on the Bluetooth Devices panel. All other Bluetooth devices are ignored (see MX7 Reference Guide for details).

Taskbar Icon Legend



Bluetooth module is connected to one or more of the targeted Bluetooth device(s).



MX7 is not connected to any Bluetooth device.

MX7 is ready to connect with any Bluetooth device.

MX7 is out of range of all paired Bluetooth device(s). Connection is inactive.

Note: When an active paired device, not the MX7, enters Suspend Mode, is turned Off or leaves the MX7 Bluetooth scan range, the Bluetooth connection between the linked device and the MX7 is lost. There may be audible or visual signals as paired devices disconnect from the MX7. The Bluetooth remote device should be as close as possible, in direct line of sight, with the MX7 during the pairing process.

Notes

- The MX7 does not have a Bluetooth managed LED.
- The LED on the remote Bluetooth scanner illuminates during a scanning operation; the Scan LED on the MX7 does not illuminate.
- Barcode data captured by the Bluetooth scanner is manipulated by the settings in the MX7 Scanner Properties control panel applet.
- Multiple beeps may be heard during a barcode scan using the Bluetooth scanner; beeps from the Bluetooth scanner as the barcode data is accepted/rejected, and other beeps from the MX7 during final barcode data manipulation.

See *Accessories* for supported Bluetooth printers and scanners.

AppLock, if installed, does not stop the end-user from using the Bluetooth application, nor does it stop authorized Bluetooth-enabled devices from pairing with the MX7 while AppLock is in control. See the *MX7 Reference Guide* for more Bluetooth information and instruction.

Mobile Bluetooth Accessories

Using the Bluetooth Barcode reader, scan the (Lnk) pairing barcode located on the MX7 to pair the mobile barcode reader with the MX7. See *Bluetooth Devices* in the *Quick Start* section for details. Refer to the *MX7 Reference Guide, Chapter 1 – Introduction, Bluetooth* section for instruction when Discovering nearby Bluetooth scanners and printers.

Getting Help

All LXE user guides are now available on one CD and they can also be viewed/downloaded from the LXE ServicePass website. Contact your LXE representative to obtain the LXE Manuals CD.

You can also get help from LXE by calling the telephone numbers listed on the LXE Manuals CD, in the file titled *Contacting LXE*. This information is also available on the LXE website.

Explanations of terms and acronyms used in this guide are located in the file titled *LXE Technical Glossary* on the LXE Manuals CD and the LXE ServicePass website.

Manuals

- MX7 User's Guide – English
- MX7 User's Guide – German
- MX7 Reference Guide
- MX7 Cradle Reference Guide
- MX7 Multi-Charger / Analyzer User's Guide
- RFTerm Reference Guide
- LXE Security Primer
- CE API Programmers Guide
- Integrated Scanner Programmers Guide

Accessories

Note: Items with a Green letter R in the second column are ROHS-compliant. Please contact your LXE representative when ordering ROHS-compliant items as the part number may have changed. Items without the letter R may have received ROHS-compliance after this guide was published.

MX7 Mobile Device

MX7 Main Battery , Lithium Ion	R	MX7A380BATT
MX7 Main Battery, Lithium Ion (for Cold Storage MX7CS)	R	MX7A381BATT
5 Unit Main Battery Charger (US power cord), Includes analyzing capabilities	R	MX7A385CHGR5US
5 Unit Main Battery Charger (no power cord), Includes analyzing capabilities	R	MX7A386CHGR5WW
Replacement MX7 Hand Strap	R	MX7A401HANDSTRAP
Carry case for MX7 with no handle, includes shoulder strap	R	MX7A4132CASENHDL
Carry case for MX7 with handle, includes shoulder strap	R	MX7A414CASEHDL
MX7 Voice Application case with belt	R	MX7A404CASEVRNHDL
MX7 Padded handle with rubber overmold and two finger trigger, includes wrist strap	R	MX7A406HANDLE
Holster for MX7 with handle, belt not included	R	MX7A405HOLSTERHDL
Holster for MX7 without handle, belt not included	R	MX7A407HOLSTERNHDL
Holster for MX7 with handle and boot, belt not included	R	MX7A410HLSTRWHDLBOOT
Holster for MX7 without handle, with boot, belt not included	R	MX7A409HOLSTERWBOOT
Holster belt	R	9200L67
Black rubber protective boot , do not use with Desktop Cradle.	R	MX7A488PROTBOOT
Yellow rubber protective boot , do not use with Desktop Cradle.	R	MX7A489PROTBOOTYEL
Carry case for MX7 with Gearkeeper retractor	R	MX7A408RETRACTORCASE

Carry case for MX7 with handle. (For use with Gearkeeper retractor – MX7A412RETRACTORWBLT).	R	MX7A411RTRCORCASEHDL
Gearkeeper retractor with belt. (For use with Carry case for MX7 with handle – MX7A411RTRCORCASEHDL)	R	MX7A412RETRACTORWBLT
MX7 Charge/Comm Interface Cable , USB Client for ActiveSync	R	MX7A052MULTICBLUSB
MX7 Charge/Comm Interface Cable , RS-232 Serial ActiveSync, D9 Female	R	MX7A055MULTICBLDA9F
AC/DC power supply with US power cord for use with MX7 Charge/Comm cables	R	9000A319PSACUS
AC/DC power supply without power cord for use with MX7 Charge/Comm cables	R	9000A302PSACWW
RS-232 Serial Adapter cable , 6in, for use with printers that provide their own source of power.	R	MX7A058ADPTCBLPER
MX7 Headset coiled adapter cable , includes quick disconnect headset connector. A headset is still required.	R	MX7A060ADPTCBLVOICE
MX7 Replacement Stylus , 10-pack	R	MX7A584STYLUS
Large tethered stylus which fit the MX7 carry cases, 5 pack	R	9000A507STYLUS
CD with CE 5.0 API's and LXE API's with documentation for custom application development	R	MX7A504CE50SDK
Touch screen anti-glare anti-reflective protective film , 10 pack	R	MX7A584PROTFILM
Voice Recognition and Headsets		
VoxBrowser™ English and Americas		VOXBROWSER ENG
VoxBrowser™ Rest-of-the-World		VOXBROWSER ROW
Single ear, single headband, headset with noise canceling microphone, includes 5 replacement windscreens	R	HX1A501SNGBHEADSET
Single ear, dual headband, headset with noise canceling microphone, includes 5 replacement windscreens	R	HX1A502DUALBHEADSET
Dual ear, behind the head, headset with noise canceling microphone, includes 5 replacement windscreens	R	HX1A503BTHHEADSET
Replacement foam block for 502 dual band headsets, qty 1	R	HX1A504AHSBLOCKFOAM
Replacement head yoke for dual band 502 headset, qty 1	R	HX1A505DUALYOKE
Replacement head yoke for single band 501 headset, qty 1	R	HX1A506SINGLEYOKE
Replacement windscreen for all headset microphones, 10 Pack	R	HX1A508WINDSCREEN10
Replacement windscreen for all headset microphones, 50 Pack	R	HX1A509WINDSCREEN50
Replacement foam ear piece cover for 501 and 502 headsets, 10 pack	R	HX1A510FOAMEAR10
Replacement foam ear piece cover for 501 and 502 headsets, 50 pack	R	HX1A511FOAMEAR50
*** Contact your LXE representative for Voice Recognition and Headset availability.		

Mobile Bluetooth Barcode Readers

LXE Bluetooth Ring Scanner module with laser ring scanner, battery, two hand/wrist straps (large and small)	R	8651A100BTLASERKIT
LXE Bluetooth Ring Scanner module with 1D/2D imager ring scanner, battery, two hand/wrist straps (large and small)	R	8652A100BTIMAGERKIT
Li-Ion Spare Battery for LXE Bluetooth Ring Scanner Module	R	8650A376BTBOHBATTERY
LXE Bluetooth Ring Scanner 8-bay battery charger with US power cord	R	8650A377BTBOHCHGRUS
LXE Bluetooth Ring Scanner single-bay charger with US wall plug	R	8651A379SINGLECHGRUS
PowerScan 7000BT Scanner RS-232 with pointer	R	8700A301SCNRBTSRI
PowerScan 7000BT Base Station, RS232, without universal power supply.	R	8700A501BASERS232
PowerScan 7000BT Base Station Power Supply, Std US, 120V	R	8700A502PSACUS
PowerScan 7000BT, RS232 Cable for Base Station, DB9S, Coil, 8'	R	8700A001CBL8DA9F
PowerScan 7000BT Battery Charger with Power Supply, Four Station, US Std	R	8700A503CHGR4US
PowerScan 7000BT Battery Pack	R	8700A504BATT
Bluetooth Standard Range Fuzzy Logic laser	R	8810A326SCNRBTfZ
Bluetooth Auto Range LORAX laser	R	8820A327SCNRBTfR
Spare battery	R	8800A376BATTERY
US AC Power Cord (use with 8800A301ACPS and 8800A379CHGRBASE)	R	8800A051POWERCORD
Single Slot Universal Battery Charger adapter cup for 8800 Battery	R	8800A377CHGRADPTRCUP
Single slot battery charger with International power supply	R	8800A378CHGR1SLOT
Universal Battery charger 4-Slot Base. Power Supply included, no AC power cord.	R	8800A379CHGRBASE
LS3408 Scanner Holster for Belt	R	8200A501HOLSTRBELT
Mounted Take Up Reel (Mounted applications)	R	8000A501INDREEL
Auto Sense Intellistand, Hands Free Scanning	R	8500A505STANDSMT
CBL ASSY, DA9F, 9ft (cradle to terminal)	R	8500A051CBL9DA9F
Desk Cradle, Radio/Charging, Multi-Interface (requires data cable and power supply)	R	8800A001CRADLERCMi
Desk Cradle, Charge Only, Multi-Interface (requires data cable and power supply)	R	8800A002CRADLECMi
Forklift Cradle, Radio/Charging, Multi-Interface (requires data cable and power supply)	R	8800A003CRADLEVRCMi
Forklift Cradle, Charge Only, Multi-Interface (requires data cable and power supply)	R	8800A004CRADLEVCMi
US AC Power Cord (use with 8800A301ACPS and 8800A379CHGRBASE)	R	8800A051POWERCORD
Universal Desktop Power Supply 90-264VAC, 9VDC, 2A, EPS	R	8800A301ACPS
9-60VDC Forklift Power Supply (For Use with Forklift Cradles)	R	8800A302DCPS
Power Cable: Connects DC Power Supply to Forklift Cradle	R	8800A052DCPWRCABLE
Forklift Rugged Scanner Holder with RAM mount (all metal with cloth padding)	R	8800A005STAND

MX7 Cradles

Cradle Power Supply , AC/DC, US, with power cord	R	9000A321PSACUS
Cradle Power Supply , AC/DC, WW, without power cord	R	9000A322PSACWW
Cradle , Desktop with spare battery charging	R	MX7A388DESKCRADLEWW
MX7 Passive vehicle cradle . Does not support charging or communication. U-Bracket kit included.	R	MX7A007VMCRADLE
RAM mount kit for MX7 Passive Vehicle Bracket. This kit does NOT include the Cradle. Attaches to U-Bracket.	R	MX7A001RAMBRKT
MX7 Main Battery , Lithium Ion	R	MX7A380BATT
Black rubber protective boot , designed for Desktop Cradle use.	R	MX7A490PROTBOOTBLK
Yellow rubber protective boot , designed for Desktop Cradle use.	R	MX7A491PROTBOOTYEL
MX7 Charge/Comm Interface Cable , USB Client for ActiveSync	R	MX7A052MULTICBLUSB
MX7 Charge/Comm Interface Cable , RS-232 Serial ActiveSync, D9 Female	R	MX7A055MULTICBLDA9F
RS-232 Serial Adapter Cable , 6 in., for use with printers that provide their own source of power	R	MX7A058ADPTCBLPER
MX7 Headset coiled adapter cable, includes quick disconnect headset connector. A headset is still required.	R	MX7A060ADPTCBLVOICE
MX7 Base Plate Kit	R	MX7A586RPLCENDPLATE
Tethered Scanners (Cradle connection only)		
Scanner, Powerscan SR, 8' Cbl, WW	R	8300A326SCNRPWRSR8DA9F
Scanner, Powerscan SR, 12' Cbl, US	-	8300A327SCNRPWRSR12DA9F
Scanner, Powerscan LR, 8' Cbl, WW	R	8310A326SCNRPWRLR8DA9F
Scanner, Powerscan LR, 12' Cbl, US	R	8310A327SCNRPWRLR12DA9F
Scanner, Powerscan XLR, 8' Cbl, WW	R	8320A326SCNRPWRXLR8DA9F
Scanner, Powerscan XLR, 12' Cbl, US	-	8320A327SCNRPWRXLR12DA9F
Scanner, LS3408ER, 9' Cbl, US See Note	R	8520A326SCNRERDA9F
Scanner, LS3408FZ, Fuzzy Logic, 9' Cbl, US	R	8510A326SCNRFZYDA9F

The MX7 Hand Held Computer

Reboot Sequence


When the Windows CE desktop is displayed or an application begins, the power up (or reboot) sequence is complete. If you have previously saved your settings, they will be restored on reboot. Application changes are saved when OK is clicked on an application applet.

Warm Reset


Hold down the Power key for 15 seconds until the display blanks, then release the key. A warm reset does not affect the operating system and no data loss occurs. There may be slight delays while the wireless client connects to the network, re-authorization for voice-enabled applications completes, Wavelink Avalanche management of the MX7 startup completes, or Bluetooth relationships establish or re-establish.

Cold Reset

Important:-- Because of the extreme nature of the Cold Reset, LXE recommends that the Cold Reset be used only as an emergency procedure and the Warm Reset be used whenever necessary.




Tap  | **Run** and type COLDBOOT.EXE. Tap the OK button to coldboot the MX7. The default settings are restored when the device powers on again.

For OS versions prior to August 2008, calibrating the touchscreen will need to be performed when the cold boot process is complete.

If needed, change the MX7 Time and Date from it's factory default value by tapping the  | **Settings** | **Control Panel** | **Date/Time** icon.


Saving Changes to the Registry

The MX7 saves the registry when you:

- Tap the  | **Run** | and type **Warmboot**.
- Perform a Suspend / Resume function (by pressing the Pwr key and then pressing it again).
- Install Restart in the Start menu by  | **Run** | CTL RESTART=1 and then tap  | **Restart**.

The registry save process takes 5 – 10 seconds.

The registry is automatically saved every 20 minutes. It is also saved every tenth time the registry settings are changed. Registry settings are changed when control panel applet (e.g. Date/Time) parameters are changed by the user and a warm boot was not performed afterward.

When you tap  | **Run** | and type **Coldboot**, factory default registry settings are loaded. All user changes and settings are lost.

Touchscreen Display



Figure 26 Touchscreen Display

The touchscreen display is an active color LCD unit capable of supporting VGA graphics modes. Display size is 240 x 320 pixels or ¼ VGA in portrait orientation. The touchscreen allows signature capture and touch input. A pen stylus is included. The touchscreen responds to an actuation force (touch) of 4 oz. of pressure (or greater).

The color display is optimized for indoor lighting. The display is off when the mobile device is in Suspend mode and when the device is being powered by the backup battery only.

Applying the Protective Film to the Display

First, clean the display of fingerprints, lint particles, dust and smudges.


Remove the protective film from its container. Remove any protective backing from the film sheet by lifting the backing from a corner of the film. Discard the backing.

Apply the film to the screen starting at one side and smoothing it across the display. If air bubbles appear, raise the film slightly and continue smoothing the film across the display until it covers the glass surface of the display.

If dust, lint or smudges are trapped between the protective film and the glass display, remove the protective film, clean the display and apply the protective film again.

Touchscreen Calibration

If the touchscreen is not responding properly to stylus taps, the touchscreen may need to be recalibrated. Press <Ctrl>+<Esc> to force the Start Menu to appear, if needed. Contact your System Administrator for assistance.

To recalibrate the screen, select  | Settings | Control Panel | Stylus | Calibration.

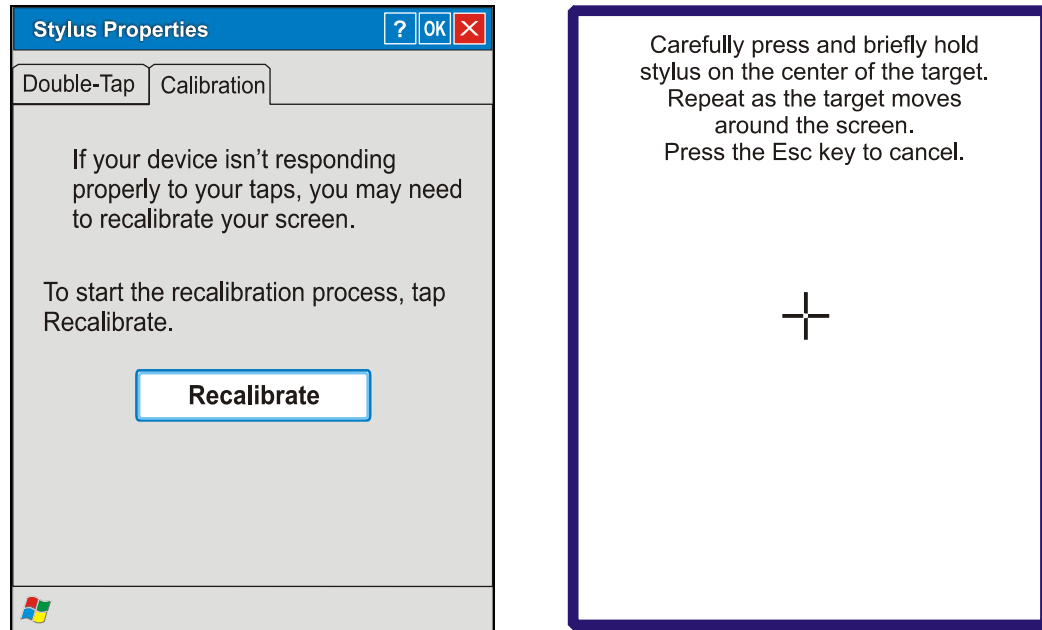


Figure 27 Touchscreen Recalibration

To start, tap Recalibrate. Follow the instructions on the screen and press the Enter key to save the new calibration settings or press <Esc> to cancel or quit.

See the *MX7 Reference Guide* for complete instructions.

Cleaning the Glass Display/Scan Aperture

Note: These instructions are for components made of glass. If there is a removable protective film sheet on the display screen, remove the film sheet before cleaning the screen.

Keep fingers and rough or sharp objects away from the scan aperture and display. If the glass becomes soiled or smudged, clean only with a standard household cleaner such as Windex® without vinegar or use Isopropyl Alcohol. Do not use paper towels or harsh-chemical-based cleaning fluids since they may result in damage to the glass surface. Use a clean, damp, lint-free cloth. Do not scrub optical surfaces. If possible, clean only those areas which are soiled. Lint/particulates can be removed with clean, filtered canned air.

Adjusting the Display Backlight

Set the Display Backlight Brightness

When the backlight is on, press the **Blue** key and the **Scan** key.

- Use the Up Arrow and Down Arrow keys to adjust backlight brightness until the display lightens or darkens to your satisfaction.
- Press the Enter key to exit this mode.

At the minimum dimness level, the display is still viewable. The brightness setting is recalled upon a return from Suspend and also upon a warm reset.

Set the Display Backlight Timer

Select  | **Settings** | **Control Panel** | **Display** | **Backlight** tab. Change the parameter values and tap OK to save the changes.

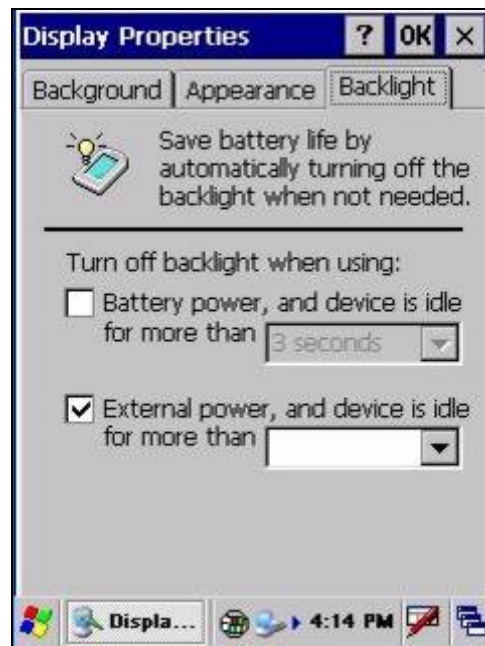



Figure 28 Setting the Display Backlight Timer

The first option affects the mobile device when it is running on battery power only. The second option affects the device when it is running on external power (e.g. AC adapter).


The default value for the battery power timer is 3 seconds. The default value for the external power timer is 2 minutes. **The backlight will remain on all the time when both checkboxes are blank.**

The display backlight timer *dims the backlight* at the end of the specified time.

The keypad backlight can be synchronized with the display backlight activity. See  | **Settings** | **Control Panel** | **Keyboard** | **Backlight** tab

Setting the Power Schemes Timers

Note: Refer to the section titled **Power Modes** in the **MX7 Reference Guide** for information relating to the power states of the mobile device.

Select  | **Settings** | **Control Panel** | **Power** | **Schemes** tab. Change the parameter values and tap OK to save the changes.

Battery Power Scheme

Use this option when the device will be running on battery power only.

Switch state to User Idle:	Default is After 3 seconds
Switch state to System Idle:	Default is After 15 seconds
Switch state to Suspend:	Default is After 5 minutes

AC Power Scheme

Use this option when the device will be running on external power (e.g. AC adapter).

Switch state to User Idle:	Default is After 2 minute
Switch state to System Idle:	Default is After 2 minutes
Switch state to Suspend:	Default is After 5 minutes

These mode timers are cumulative. The System Idle timer begins the countdown after the User Idle timer has expired and the Suspend timer begins the countdown after the System Idle timer has expired. When the User Idle timer is set to “Never”, the power scheme timers never place the device in User Idle, System Idle or Suspend modes (even when the device is idle).

Because of the cumulative effect, and using the Battery Power Scheme Defaults listed above:

- The backlight turns off after 3 seconds of no activity,
- The display turns off after 18 seconds of no activity (15sec + 3sec),
- And the device enters Suspend after 5 minutes and 18 seconds of no activity.

Setting The Audio Speaker Volume

Note: An application may override the control of the speaker volume. Turning off sounds saves power and prolongs battery life.

The speaker is located on the front of the device above the MX7 logo. The audio volume can be adjusted to a comfortable level for the listener. The volume is increased or decreased one step each time the volume key sequence is pressed. The device has an internal speaker and a jack for an external headset. Operational “beeps” are emitted from the speaker.

Using the Keypad

Note: Volume & Sounds (in Settings) must be enabled before the following key sequences will adjust the volume.

To adjust speaker volume:

- Tap the **Orange** key then the **Scan** key to enter Volume change mode.
- Use the **Up Arrow** and **Down Arrow** keys to adjust volume until the speaker volume is satisfactory.
- Press the **Enter** key to exit this mode.

Using the Touchscreen

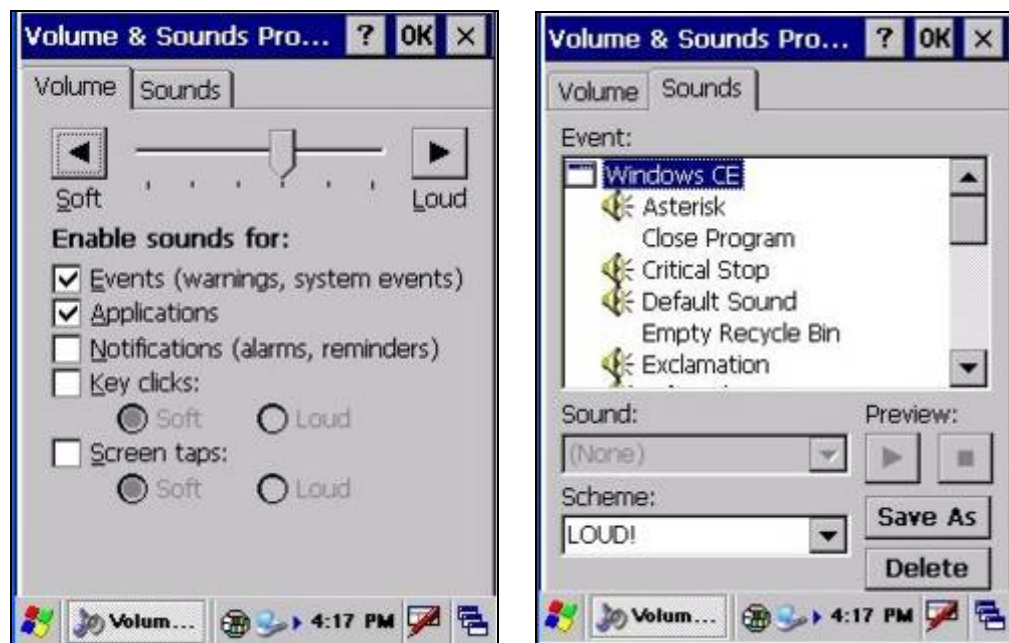



Figure 29 Volume & Sounds Properties

Tap  | **Settings** | **Control Panel** | **Volume & Sounds** | **Volume** tab. Change the volume setting and tap OK to save the change. You can also select / deselect sounds for key clicks and screen taps and whether each is loud or soft.

As the volume scrollbar is moved between Loud and Soft, the computer will emit a tone each time the volume increases or decreases in decibel range.

The Keypads

The keypad is installed and configured by LXE to your specifications.

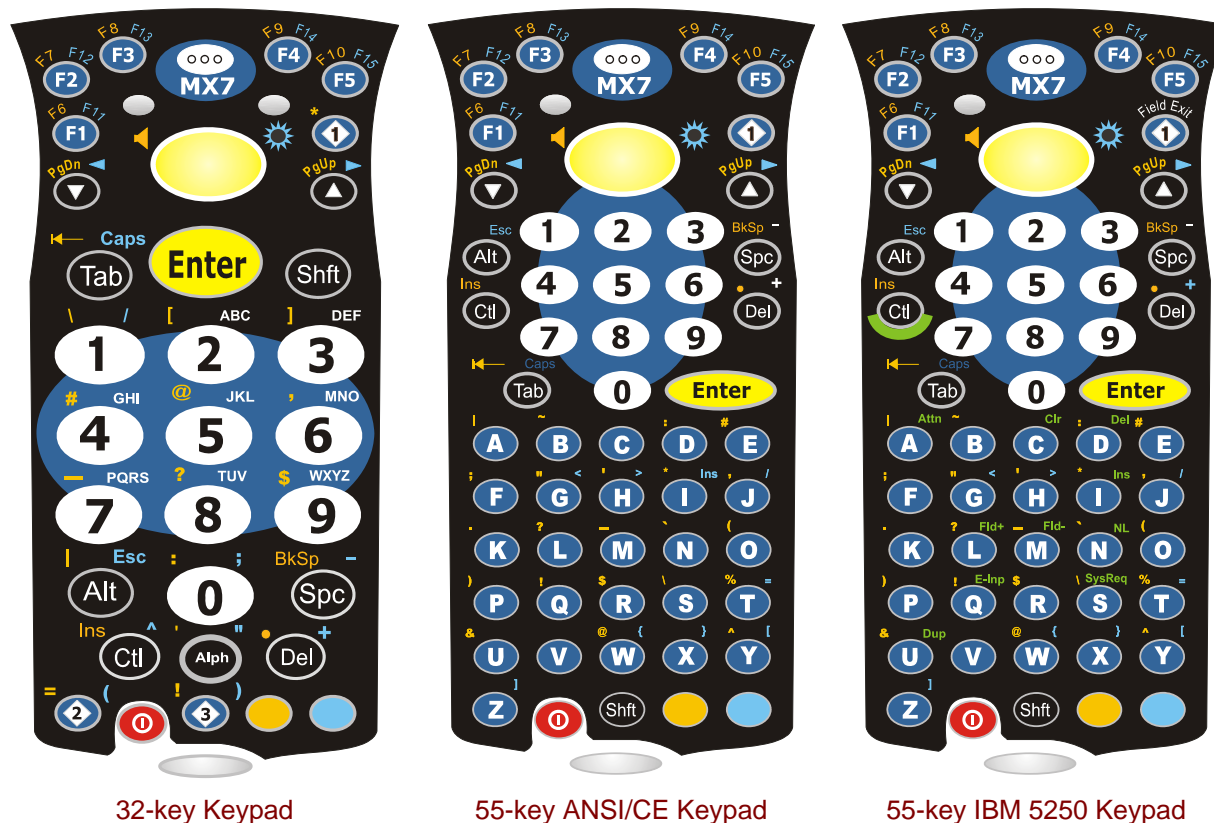


Figure 30 The 32-key and 55-key Keypads

See *Appendix A – Key Maps* for instruction on the specific keypresses to access all keypad functions.

Note: Refer to the [MX7 Reference Guide](#) when re-mapping the keypad keys.

Keypad Backlight

The keypad LED backlight can be turned off to conserve battery power. The default value is Always off. The backlight does not activate during Suspend/Resume or hardware reset.

Contact your System Administrator for assistance. Select Follow Display to synchronize the keypad backlight with the Display backlight timer settings. See **Start | Settings | Control Panel | Display icon | Backlight tab**.

LED Indicators

System Status

The System Status LED is located at the top left of the keypad, above the Scan button.

When the LED is . . .	The Status is . . .	Comment
Blinking Red	Power Fail	Replace the main battery with a fully charged main battery. Or Connect the MX7 to external AC power (to allow the internal charger to charge the main battery).
Steady Red	Main Battery Low	Low Battery Warning. Replace the main battery with a fully charged main battery.
Blinking Green	Display Off	No user intervention required.
No Color	Good	No user intervention required.

Scan Status

The Scan Status LED is located below the MX7 keypad.

When the Scan Status LED is . . .	The Status is . . .
Steady Green	Good Scan
Steady Red	Scan in Progress
Amber	Scanner/imager programming changes are being saved.
No Color	Scanner/Imager ready for use.

Alpha Mode (32-key Alph Key)

The Alpha Mode LED is located below the <F4> key on the 32-key keypad.

LED functions outlined in previous sections titled *System Status* and *Scan Status* are the same for the 32-key mobile device.

When the Alph LED is . . .	The Status is . . .
Steady Green	Device is in “Alpha” character input mode.
No Color	Device is in “Numeric” key input mode.

Standard Keys

Scan	The integrated scanner/imager scans only when the Scan button is pressed (or when the scan trigger is pressed on the optional trigger handle).
Enter	The Enter key is used to confirm a forms entry or to transmit information. How it is used is determined by the application running on the mobile device.
Diamond	The Diamond key(s) can be programmed to duplicate a single keypress (as defined by Windows CE) with the exception of the Shift, Alt and Ctrl/Ctl key.
Numeric	The number keys are used to add numbers to data entry fields.
Alpha	The alpha keys are used to add letters and characters to data entry fields.
Space	The Spc key adds a space to the line of data on the display. This function is similar to a regular keyboard's Spacebar. Note that the Spc key only stays active for one keystroke.

Function Keys

Sticky Keys

The Sticky Key feature allows the user to activate multi-keypress combinations with one finger. A sticky key function is similar to the Caps Lock key function on a desktop computer keyboard.

Ctl / Ctrl (Control key)



A Control sticky keypress stays active until the Control key is pressed again. The Control key enables the control functions of the keypad. This function is similar to a regular keyboard's Control key. Each time you need to use a Control function, you need to press the Ctl / Ctrl key before pressing the desired key.

Alt (Alternate key)



An Alt sticky keypress stays active until the Alt key is pressed again. The Alt key enables the alternate functions of the keypad. This function is similar to a regular keyboard's Alt key. Each time you need to use an alternate function, you need to press the Alt key before pressing the desired key.

Shft (Shift key)



A Shift keypress ends a sticky key function. The Shift key enables the shifted functions of the keypad. This function is similar to a regular keyboard's Shift key. Note that the Shift key only stays active for one keystroke. Each time you need to use a Shifted function, you need to press the Shift key before pressing the desired key.

When the Shift key is pressed the next key is determined by the major key legends, i.e., the alpha keys display lower case letters -- when CAPS is On alpha characters are capitalized. For example, when CAPS is On and the Shift key and the G key are pressed, a lower case g is displayed.

Orange and Blue Keys



The Orange and Blue keys are sticky keys that, when tapped, activate the second functions of the keypad. Printed above many keys are small characters, in either orange (on the left side of the key) or blue (on the right side of the key), that represent the second function of that key. Using the sticky key activates the second key function.

Note that the blue and orange sticky keys only stay active for one keystroke. Each time you need to activate a second function you must press the Orange or Blue key. To cancel a sticky key function before pressing another key, press the same sticky key again.

Orange Key

Tap the Orange key to enter “orange” mode. Tap it again to cancel “orange” mode.

If you were in “blue” mode before you pressed the Orange key, blue mode is cancelled and you enter Orange mode.

Blue Key

Tap the Blue key to enter “blue” mode. Tap it again to cancel “blue” mode.

If you were in “orange” mode before you pressed the Blue key, orange mode is cancelled and you enter Blue mode.

Field Exit

A square icon with a black background. It features a white circle containing a blue number '1'. Above the circle, the words 'Field Exit' are written in white.	<p>The Diamond 1 key can be programmed as a Field Exit key. The Field Exit key is used to exit an input field. If the field is an Auto Enter field, the auto transmit function is activated. Refer to the <i>Mappable Diamond Keys</i> section for instruction.</p>
A square icon with a black background. It features a white circle containing the letters 'Ctl' in green. Below the circle, there is a green curved line.	<p>IBM 5250 specific keypad only. A Control sticky keypress stays active until the Control key is pressed again. The Control key enables the control functions of the keypad. This function is similar to a regular keyboard's Control key. Each time you need to use a Control function, you need to press the Ctl key before pressing the desired key.</p> <p>Note the green highlight on the Control key and the 5250 commands highlighted in green on the 5250 keypad overlay.</p>

Mode Key Functions

CapsLock Mode

This function is similar to a regular keyboard's CapsLock key. Note that the CapsLock mode stays active until the CapsLock key sequence is pressed again. Each time you need to use a Caps function, you need to press the Caps key sequence first. To cancel a CapsLock function press the Caps key sequence again.

The CapsLock key sequence is Blue key then the <Tab> key.

55-Key Keypad

- No CapsLock AND No Shift keypress – result is a lowercase letter.
- CapsLock OR Shift – result is an uppercase letter.
- CapsLock AND Shift keypress – result is a lowercase letter.

Visual Cue: A Capital A is displayed in the taskbar when the device is in CapsLock mode or the Caps Key has been pressed and the next key (to be capitalized) has not been pressed.


32-Key Keypad

Example: 2 B or Not 2 B




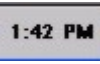



- To put the number 2 in a text entry field: Tap the <2> key once.
- To put a lowercase “b” in a text field: Tap the <Alph> key, then tap the <2> key twice.
- To put an uppercase “B” in a text field: Tap the <Alph> key, tap the <Shft> key or the <CapsLock> key, then tap the <2> key twice.
- To enter a string of letters in a text field, tap the <Alph> key to toggle it On. It remains active until it is tapped again and toggled off.
- To enter a string of numbers in a text field, make sure the <Alph> key is toggled off.

Taskbar Icons

As MX7 devices and applications open and change state, icons are placed in the Taskbar. In most cases, tapping the icon in the Taskbar opens the related application.

Refer to  | **Help** for an explanation of standard Windows CE taskbar icons.

 Following are **a few** of the MX7 and LXE unique taskbar icons that may appear in the Taskbar. These icons are in addition to the Windows CE taskbar icons.

	Wireless Client Connected / Not Connected
	Bluetooth
	ActiveSync Connection
	Current Time
	Summit Client signal strength.
	LXEConnect session
	Battery power remaining

Batteries

Note: *New batteries must be charged prior to use. If the main battery and backup battery are depleted, the mobile device reverts to factory default values. Wireless configuration parameters will need to be re-entered after reverting to factory default values. The backup battery is continually recharged by the main battery pack.*

The mobile device is designed to work with a 2200 mAh Lithium-Ion (Li-ion) battery from LXE. Under normal conditions it should last approximately eight to ten hours before requiring a recharge. During very heavy scanning or RF transmitter use, the operating time of the battery may be less. The operating system keeps date and time valid for a minimum of four days using a fully charged backup battery and a main battery pack installed that has reached the Low Warning point.

Battery Pack Model Number – 159904-0001 / MX7A380BATT

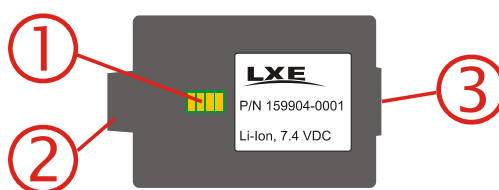




Figure 31 Lithium Ion Battery Pack

1. Contacts, Battery Charging
2. Retaining Clip
3. Tab


Main Battery

<p>CAUTION</p> 	<p>RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.</p> <p>DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.</p>
<p>ATTENTION</p> 	<p>Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.</p> <p>Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.</p>

The main battery has a rugged plastic enclosure that is designed to withstand the ordinary rigors of an industrial environment. Exercise care when transporting the main battery making sure it does not come in contact with excessive heat or any power source other than an MX7 MultiCharger or the mobile device.

A new main battery pack can be fully charged in 6 hours when it is in an MX7 connected to AC power and 3.5 hours when it is in the MX7 multicharger.


Backup Battery

The internal 50mAh Nickel Cadmium (NiCd) backup battery provides power to the device for a short amount of time when the main battery has been depleted, removed or has failed. The backup battery status and conditioning is available using  | **Settings** | **Control Panel** | **Battery**. The backup battery is charged by the main battery pack only. If the backup battery is completely discharged, it may take up to 5 hours to recharge.

Backup battery replacement is performed by LXE.

Note: An uninterrupted external power source (wall AC adapters) transfers power to the computer's internal charging circuitry which, in turn, recharges the main battery and backup battery. Frequent connection to an external power source, if feasible, is recommended to maintain backup battery charge status as the backup battery cannot be recharged by a dead or missing main battery.

Battery Hotswapping

Important: When the backup battery power is Low or Very Low ( | **Settings** | **Control Panel** | **Power** | **Battery** tab) connect the AC adapter to the MX7 before replacing the main battery pack.

Replace the main battery pack after first pressing the Power key and placing the MX7 in Suspend Mode. LXE recommends any work in progress be saved prior to replacing the main battery pack.

Simply replace the discharged main battery with a fully-charged main battery. A fully charged backup battery will retain data during a main battery hotswap for 5 minutes.

Warning: Never replace the main battery in a hazardous location.

MX7 Battery Multi-Charger

The MX7 Multi-Charger is not approved for use in a Hazardous Location.

See Also: *Section titled MX7 Cold Storage later in this guide.*

Charge a Main Battery Pack

The main battery pack can be charged while it is in the MX7 (connected to an AC power supply) or while it is in the LXE MX7 Multi-Charger.

Please refer to the *MX7 Multi-Charger User's Guide* for instruction.

The multi-charger requires an external power source before battery pack charging/analyzing can commence.

The external Power Supply for the Multi-charger is shipped with the multi-charger.

MX7 Multi-Chargers are not approved for use in Hazardous Locations.

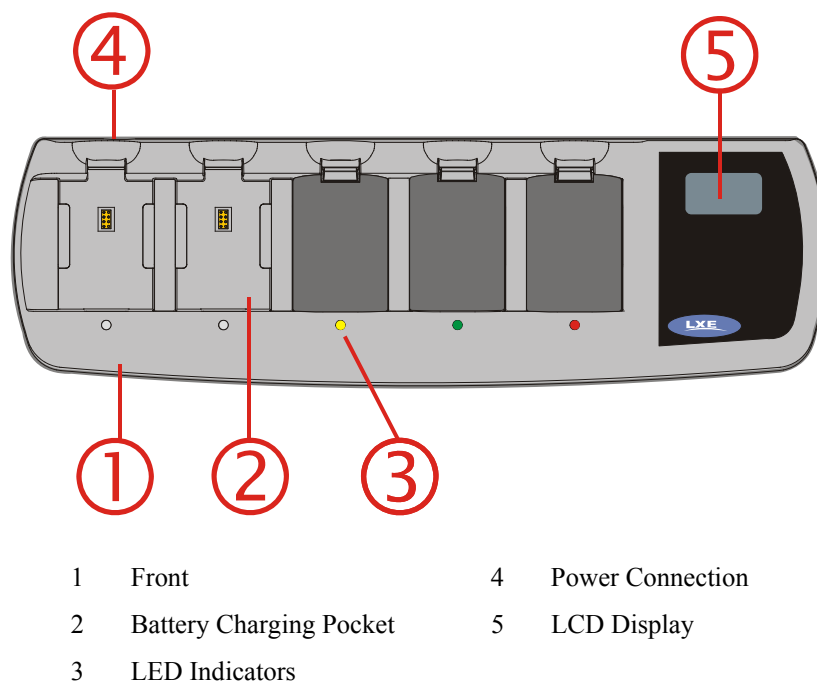


Figure 32 MX7 Multi-Charger / Analyzer

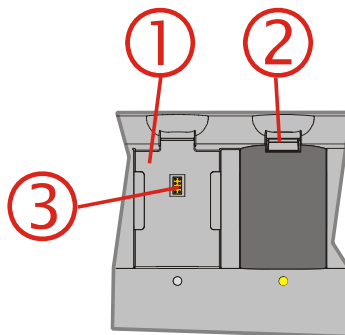


Figure 33 Insert Battery Pack in Charging Pocket

1. Battery Well
2. Retaining Clip
3. Battery Charging Contacts

Lower the battery pack straight into the battery charger pocket and push it down firmly. Do not "slam" the battery into the charging cup or drop it into the cup.

Failure to follow these instructions can result in damage to the main battery or the charger.



Please refer to the *MX7 Multi-charger User's Guide* for technical information and operating instructions.

MX7 Cradles (Optional)

MX7 docking cradles restrain the MX7, re-charge batteries, and enable serial, audio or USB communication with a PC, scanner, printer or other peripheral device. MX7 keypad data entries can be mixed with cradle-tethered scanner barcode data entries while the MX7 is in a powered cradle. Bluetooth device connection and use, while the MX7 is docked, are managed by the MX7 Control Panel Bluetooth program, not the cradle. The cradles are designed to secure an MX7 with or without a protective boot (MX7A490PROTBOOTBLK or MX7A491PROTBOOTYEL), a handstrap and/or a trigger handle.

Using a wall AC adapter, the desktop cradle can also recharge a spare MX7 battery in approximately 4 hours. The MX7 battery recharging is managed by the docked MX7 power management configuration. The MX7 can be either On or in Suspend Mode while in the cradles. Special purpose and power cables are available from LXE.

Wireless host/client communications can occur whether the cradle is receiving external power or not as wireless functions draw power from the main battery in the MX7.

The **MX7 Passive Vehicle Cradle** does not have connectors that can accept an external power source or tethered scanner. It is designed to secure the MX7, without or without a protective boot, handstrap or trigger handle, in a vehicle.

Important: Use the power cable provided with the cradle power supply adapter only with the desktop cradle. The adapter is incompatible with other MX7 power cables.

Suggestions / Notes

- Remove cables from the I/O port of the MX7 before docking it in a cradle.
- Review the *Base Plate Replacement* section in the *MX7 Cradle Reference Guide* and install a new base plate on the MX7 if necessary.
- Allow clearance above the cradles for inserting an MX7 with a trigger handle.
- Allow clearance behind the cradles for power cable connection ease. Allow clearance in front of the cradles for serial and I/O cable connection ease.
- Route desktop cradle cables to ensure they are protected from jostling, tugging or being disconnected by objects moving nearby.
- Install the pocket insert in the cradle charging well for use with an MX7 without a boot enclosure.
- Remove the pocket insert for use with an MX7 with a boot (MX7A490PROTBOOTBLK or MX7A491PROTBOOTYEL) enclosure.
- Use care when inserting the spare battery into the charging bay. Do not slam the battery into the bay, as this action could damage the contacts at the base of the charging bay.
- Keep dirt and foreign objects out of the cradles. Do not short circuit any of the desktop cradle charging terminals (pins), as this action could result in injury or property damage.
- Refer to the *MX7 Reference Guide* for information and instruction when using Bluetooth scanning or printing devices with an MX7 docked in a powered or non-powered cradle.



Please refer to the *MX7 Cradle Reference Guide* for installation, technical specifications and user instruction.

MX7 Cold Storage

Highlights

- MX7 Cold Storage (MX7CS) battery has a blue label.
- Snowflake decal above the MX7CS keypad.
- Heating element visible on the MX7CS touchscreen and the scanner aperture.
- MX7CS cold storage battery is recharged in the MX7 Multi-charger, MX7 Desk Cradle and when in an MX7 attached to an external power source (e.g. AC adapter).

The MX7 Cold Storage is designed to operate normally when reading barcodes and moving from, and into, cold storage warehouses, freezers and vehicles where the temperatures may vary between -30°C and 5°C (-22°F and 41°F).

Cold Storage Battery

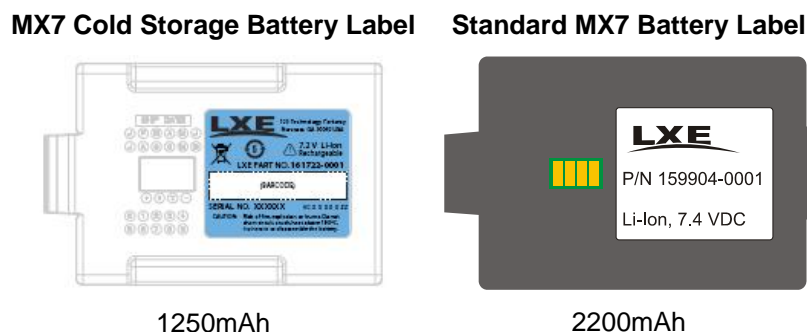


Figure 34 MX7 Cold Storage Battery

There is no change in the way the Cold Storage battery is inserted into and removed from the MX7CS battery well. See section in *Quick Start* titled *Inserting Fully Charged Battery* for instruction.

MX7CS Battery Life – minimum 2.5 hours while the unit is roaming, powered on with ambient temperature -10°C (14°F) or above, Display backlight turned on, Keypad LED backlight on, radio connected to Access Point, and scanner decoding barcodes.

The LXE Li-Ion main battery (MX7A381BATT) has been designed specifically for the MX7 Cold Storage device. This battery has a blue label while the standard MX7 battery has a white (MX7A380BATT) label.

Snowflake Decal

An MX7 Cold Storage device has a snowflake decal between the touchscreen and the keypad. It is located to the left when the mobile device screen is facing forward.



Due to the heating elements overlaying the scan aperture, scanning may require the user to move the MX7CS scan aperture closer to the barcode for good scan results.

Heating Elements

Heating elements activate when ambient temperature drops below 0°C (32°F). LXE recommends using the stylus when performing screen touch functions.

There may be some condensation as the MX7CS moves in and out of cold storage areas. The condensation on the touchscreen and the scan aperture quickly dissipates.

The touchscreen heating elements and scanner aperture heating elements may be visible when the MX7 is tilted slightly. No user interaction is required to turn the heating elements on/off. Stylus taps on the touchscreen function normally.

Recharging Batteries

The Cold Storage battery pack can be recharged to full capacity while in an MX7CS connected to an external power source and also while the Cold Storage battery pack is inserted in the charging bay in a powered MX7 desk cradle. The battery pack temperature must be above 10°C (50°F) before re-charging can begin.

Battery packs in the MX7 Multi-charger begin charging when the battery pack temperature is between 10°C (50°F) and +40°C (100°F).

To charge the Cold Storage battery pack to full capacity, the MX7 Multi-charger firmware must be at V1.07 or greater. The firmware version is noted on the multi-charger label on the bottom of the device.

If your multi-charger firmware needs to be upgraded, please contact your LXE representative.

The multi-charger and AC adapter are not designed to operate in a freezer or cold storage environment. Please refer to the *MX7 Multi-charger User's Guide* for instruction and technical information.

Hot-swapping the Cold Storage Battery

The MX7CS, and a charged 2.5V Supercap backup battery, retains data during a main battery hot-swap at -30°C (-22°F) for at least 90 seconds. The temperature of the fully charged replacement Cold Storage main battery must be +10°C (14°F), or above.

Normal Operation Temperature Ranges

- In the freezer where the temperature ranges between -30°C to -18°C (-22°F to 0°F).
- In the loading dock where temperature ranges between 0°C to 5°C (32°F to 41°F) with the relative humidity at 65%
- Moving between the freezer and a loading/unloading area where the temperature transitions from -30°C to 5°C (-22°F to 41°F)

Appendix A Key Maps

Introduction

Remember :

“Sticky” keys are also known as “second” function keys.

Ctl/Ctrl, Alt, Shft, Blue and Orange keys are “sticky keys”. Sticky keys do not need to be held down before pressing the next (or desired) key. It is valid to use combined modifiers on specific keys.

Note: The key mapping in this appendix relates to the physical keypad. See section titled Input Panel for the Virtual (or Soft) Keypad used with the stylus. See Also: Keypad Control Panel in the MX7 Reference Guide.

55-Key Alphanumeric Keymaps

ANSI / CE Keypad

When using a sequence of keys that includes a sticky key, press the sticky key first, release it, then press the rest of the key sequence.

When using a sequence of keys that includes the Orange or Blue keys, press the color key first then the rest of the key sequence.

Alphabetic keys default to lower case letters. Press the Shft key, then the alphabetic key for an uppercase letter.

When the computer boots, the default condition of Caps (or CapsLock) is Off. The Caps (or CapsLock) condition can be toggled with Blue plus Tab key sequence.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
Power / Suspend							Power ¹
Field Exit (default VK_PAUSE) MAP=Mappable	MAP	MAP			MAP		Diamond#1
Volume Adjust Mode	x	x					Scan Key ² or V

¹ Tapping the Power key when in any sticky mode (Blue, Orange, Shift, etc) either turns the device On (when Off) or places it in Suspend (when active).

² Orange+Scan (and Blue+V) enters Volume Adjust Mode. Use Up Arrow and Down Arrow to adjust volume. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
Display Backlight Brightness Adjust Mode	x						Scan Key ³
Toggle Blue Mode							Blue
Toggle Orange Mode							Orange
Toggle Shift Mode							Shft
Alt							Alt
Control							Ctl
Scan							Scan Key
Esc	x						Alt
Space							Spc
Enter							Enter
CapsLock (Toggle)	x						Tab
Back Space		x					Spc
Tab							Tab
BackTab		x					Tab
Up Arrow							Up Arrow
Down Arrow							Down Arrow
Right Arrow	x						Up Arrow
Left Arrow	x						Down Arrow
Insert	x						I (letter i) or Ctl
Delete							Del
Home					x		Down Arrow
End					x		Up Arrow
Page Up		x					Up Arrow
Page Down		x					Down Arrow
F1							F1
F2							F2
F3							F3
F4							F4
F5							F5
F6		x					F1
F7		x					F2
F8		x					F3
F9		x					F4
F10		x					F5

³ Blue+Scan enters Backlight Brightness Adjust Mode. Use the Up Arrow and Down Arrow to adjust brightness. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
F11	x						F1
F12	x						F2
F13	x						F3
F14	x						F4
F15	x						F5
F16					x		F1
F17					x		F2
F18					x		F3
F19					x		F4
F20					x		F5
F21 ⁴		x			x		F1
F22		x			x		F2
F23		x			x		F3
F24		x			x		F4
a							A
b							B
c							C
d							D
e							E
f							F
g							G
h							H
i							I
j							J
k							K
l							L
m							M
n							N
o							O
p							P
q							Q
r							R
s							S
t							T
u							U
v							V
w							W
x							X

⁴ The keypress sequence for F21 through F24 is Shift+Orange+F1 through F4.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
y							Y
z							Z
A					x		A
B					x		B
C					x		C
D					x		D
E					x		E
F					x		F
G					x		G
H					x		H
I					x		I
J					x		J
K					x		K
L					x		L
M					x		M
N					x		N
O					x		O
P					x		P
Q					x		Q
R					x		R
S					x		S
T					x		T
U					x		U
V					x		V
W					x		W
X					x		X
Y					x		Y
Z					x		Z
1							1
2							2
3							3
4							4
5							5
6							6
7							7
8							8
9							9
0							0

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
. period or . (period)		x					DEL or K
<	x						G
[x						Y
]	x						Z
>	x						H
=	x						T
{	x						W
}	x						X
/	x						J
-	x						Spc
+	x						Del
* (asterisk)		x			x		I (letter i) or 8
: (colon)		x					D
; (semicolon)		x					F
. (period)		x					K
?		x					L
` (accent)		x					N
_ (underscore)		x					M
, (comma)		x					J
' (apostrophe)		x					H
~ (tilde)		x					B
\		x					S
		x					A
“		x					G
!		x			x		Q or 1
@		x			x		W or 2
#		x			x		E or 3
\$		x			x		R or 4

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Caps Lock	
%		x			x		T or 5
^		x			x		Y or 6
&		x			x		U or 7
(x			x		O or 9
)		x			x		P or 0 (zero)

5250 Key Map for the 55-Key Keypad

LegendExplanation.....Key Sequence

Attn	Attention.....	Ctl + A
Clr	Clear	Ctl + C
Del	Delete	Ctl + D
Dup	Duplicate	Ctl + U
E-Inp	Erase Input	Ctl + Q
Field Exit	Enter	Diamond 1
Fld –	Field Minus	Ctl + M
Fld +	Field Plus.....	Ctl + L
Ins	Insert	Ctl + I
NL.....	New Line.....	Ctl + N
SysReq.....	System	Ctl + S

Please refer to the *RFTerm Reference Guide* for further information about 5250 key functions on the mobile device.

32-Key Numeric-Alpha Keypad

When using a sequence of keys that require an alpha key, first press the Alph key. Use the Shift sticky key or the Caps key sequence (Blue+Tab) for upper case alphabetic characters.

Pressing the Alph key forces “Alpha” mode for the 2,3,4,5,6,7,8, and 9 keys. The 1 and 0 keys continue to place a 1 and 0 into the text field.

To create a combination of numbers and letters before pressing Enter, remember to tap the Alph key to toggle between Alpha and Numeric mode.

When using a sequence of keys that do not include the Alph key but does include a sticky key, press the sticky key first then the rest of the key sequence.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctrl	Alt	Shift	Alpha	
Power / Suspend							Power ⁵
Field Exit (default VK_PAUSE)	MAP				MAP		Diamond#1 <i>MAP=Mappable</i>
= or (x	x			MAP		Diamond#2 Default is MAP <i>MAP=Mappable</i>
! or)	x	x			MAP		Diamond#3 Default is MAP <i>MAP=Mappable</i>
Volume Adjust Mode		x					Scan Key ⁶
Display Backlight Brightness Adjust Mode	x						Scan Key ⁷
Toggle Blue Mode							Blue
Toggle Orange Mode							Orange
Toggle Shift Mode							Shift
<u>Toggle Alpha Mode</u>							<u>Alph</u>
Alt Mode							Alt
Control Mode							Ctrl
Scan Mode							Scan Key
Esc	x						Alt
Space							Spc
Enter							Enter
CapsLock (Toggle)	x						Tab
Back Space		x					Spc
Tab							Tab

⁵ Tapping the Power key when in any sticky mode (Blue, Orange, Shift, etc) either turns the device On (when Off) or places it in Suspend (when active).

⁶ Orange+Scan enters Volume Adjust Mode. Use Up Arrow and Down Arrow to adjust volume. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

⁷ Blue+Scan enters Backlight Brightness Adjust Mode. Use the Up Arrow and Down Arrow to adjust brightness. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
BackTab		x					Tab
Up Arrow							Up Arrow
Down Arrow							Down Arrow
Right Arrow	x						Up Arrow
Left Arrow	x						Down Arrow
Insert		x					Ctrl
Delete							Del
Home					x		Down Arrow
End					x		Up Arrow
Page Up		x					Up Arrow
Page Down		x					Down Arrow
F1							F1
F2							F2
F3							F3
F4							F4
F5							F5
F6		x					F1
F7		x					F2
F8		x					F3
F9		x					F4
F10		x					F5
F11	x						F1
F12	x						F2
F13	x						F3
F14	x						F4
F15	x						F5
F16					x		F1
F17					x		F2
F18					x		F3
F19					x		F4
F20					x		F5
F21		x			x		F1
F22		x			x		F2
F23		x			x		F3
F24		x			x		F4
a						x	2
b						x	22
c						x	222
d						x	3
e						x	33

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
f						x	333
g						x	4
h						x	44
i						x	444
j						x	5
k						x	55
l						x	555
m						x	6
n						x	66
o						x	666
p						x	7
q						x	77
r						x	777
s						x	7777
t						x	8
u						x	88
v						x	888
w						x	9
x						x	99
y						x	999
z						x	9999
A					x	x	2
B					x	x	22
C					x	x	222
D					x	x	3
E					x	x	33
F					x	x	333
G					x	x	4
H					x	x	44
I					x	x	444
J					x	x	5
K					x	x	55
L					x	x	555
M					x	x	6
N					x	x	66
O					x	x	666
P					x	x	7
Q					x	x	77
R					x	x	777
S					x	x	7777

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
T					x	x	8
U					x	x	88
V					x	x	888
W					x	x	9
X					x	x	99
Y					x	x	999
Z					x	x	9999
1							1
2							2
3							3
4							4
5							5
6							6
7							7
8							8
9							9
0							0
. (period)		x					DEL
<	x						7
[x	x					2 or 2
]	x	x					3 or 3
>	x						8
=		x					Diamond#2
{	x						4
}	x						5
/	x						1
-	x						Spc
+	x						Del
* (asterisk)		x			x		8 or Diamond#1
: (colon)		x					0
; (semicolon)	x						0
. (period)		x					Del
?		x					8
` (accent)	x						6
_ (underscore)		x					7

To Get This MX7 Key / Function	Press These Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
, (comma)		x					6
' (apostrophe)		x					Alph
~ (tilde)	x						9
\		x					1
		x					Alt
"	x						Alph
!		x			x		Diamond#3 or 1
@					x		2 or 5
#					x		3 or 4
\$		x			x		9 or 4
%					x		5
^	x				x		6 or Ctrl
&					x		7
(x				x		Diamond#2 or 9
)	x				x		Diamond#3 or 0 (zero)

Appendix B Regulatory Notices and Safety Information

FCC Information:

This device complies with FCC Rules, part 15. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Warning: Changes or modifications to this device not expressly approved by LXE, Inc., could void the user's authority to operate this equipment.

EMC Directive Requirements:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Industry Canada:

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.


Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe A prescrites dans le Règlement sur le brouillage radioélectrique édictés par le ministère des Communications du Canada.

Notice:

The long term characteristics or the possible physiological effects of radio frequency electromagnetic fields have not been investigated by UL.

Li-Ion Battery

When disposing of the MX7 main battery, the following precautions should be observed: The battery should be disposed of promptly. The battery should not be disassembled or crushed. The battery should not be heated above 212°F (100°C) or incinerated.

	Important: This symbol is placed on the product to remind users to dispose of Waste Electrical and Electronic Equipment (WEEE) appropriately, per Directive 2002-96-EC. In most areas, this product can be recycled, reclaimed and re-used when properly discarded. Do not discard labeled units with trash. For information about proper disposal, contact LXE through your local sales representative, or visit www.lxe.com .
---	---

RF Safety Notice (Odyssey Client)**Caution**

This device is intended to transmit RF (Radio-Frequency) energy. In order to comply with FCC and Industry Canada radio-frequency exposure requirements for body-worn operations, this device should be used with the Nylon Holster with Belt-Loop accessory (P/N: 159890-0001) in accordance with the user instructions. This device may also be operated with body-worn holster and carry-case accessories that do not contain metallic components and maintain a minimum separation distance of 1.5 cm between the back side of the device (battery compartment side) and the user's body. This device must not contain co-located transmitters. Use of this device in a manner not consistent with these instructions can increase the risk of radio-frequency exposure.

This device contains transmitter Module FCC ID: KDZLXE4830P

RF Safety Notice (Summit 802.11 b/g Client - 4830)**Caution**

This portable device with its antenna complies with FCC's and Industry Canada's RF exposure limits set for an uncontrolled environment. This equipment has shown compliance with FCC and Industry Canada Specific Absorption Rate (SAR) limits. Highest reported SAR for the MX7 is .758W/kg on body. Any accessories not provided by LXE should not be used with this device. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

This device contains transmitter Module FCC ID: KDZLXE4831P

RF Safety Notice (Summit 802.11 a/b/g Client - 4831)**Caution**

This portable device with its antenna complies with FCC's and Industry Canada's RF exposure limits set for an uncontrolled environment. This equipment has shown compliance with FCC and Industry Canada Specific Absorption Rate (SAR) limits. Highest reported SAR for the MX7 is .225W/kg on body. Any accessories not provided by LXE should not be used with this device. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Directive Requirements (Applies only to equipment operated within the EU/EFTA)**Information to User**

A label on the exterior of the device should resemble one of the labels shown below (the label contains the LXE part number of the installed radio card). The labels shown below and affixed to the device, identify where the device may be used and where its use is restricted. Use of a device is prohibited in countries not listed below or otherwise identified by the label. (May or may not include the 0560 Notified Body No. Substitute 4 digit Notified Body No. may also be applied.)



Complies with
IDA Standards
DA103458

Republic of Singapore - LXE Dealer
License Number DA103458 complies with
IDA Standards.

MX7 Approvals/Standards



Product	EMI / EMC Standards	Safety Standards
MX7	FCC Part 15 Subpart B, Class A EN 55022 Class A (CISPR 22) EN 55024:1998 AS/NZS 3548, Class A (CISPR 22)	UL 60950 / CSA C22.2 No. 60950 IEC/EN 60950-1 CDRH: 21 CFR 1040.10 IEC/EN 60825-1

Transceiver:

Transceiver	RF standards	RF Safety Standards
MX7 with 802.11 b/g [Summit Client - 4830]	FCC Part 15 EN 300 328 IC-RSS 210	FCC O.E.T. Bulletin 65 Industry Canada RSS 102
MX7 with 802.11 a/b/g [Summit Client - 4831]	FCC Part 15 EN 300 328 EN301 893 IC-RSS 210	FCC O.E.T. Bulletin 65 Industry Canada RSS 102
MX7 with 802.11 b/g [Odyssey Client]	FCC Part 15.247, Subpart C ECC Bulletin OET 65 EN 300 328 IC-RSS 210	FCC O.E.T. Bulletin 65 Industry Canada RSS 102

LXE 802.11b/g WLAN Declaration of Conformity [Odyssey]

LXE

DECLARATION OF CONFORMITY according to:	
the R&TTE Directive;	99/5/EEC
The EMC Directive;	89/336/EEC
The Low Voltage Directive;	73/23/EEC
and the Marking Directive;	93/68/EEC
Type of Equipment: DSSS 2.4GHz WLAN Brand Name or Trademark: LXE Type Designation: MX7 with 802.11b/g WLAN Manufacturer: LXE Inc. Address: 125 Technology Parkway Norcross, GA 30092 USA	
The following harmonized European Norms have been applied:	
EMC Standards: EN 301 489-1: 07-2000 Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements EN 301 489-17:07-2000 Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for Wideband data and HIPERLAN equipment EN 55022: 1998 Limits and methods of measurement of radio disturbance characteristics of information technology equipment	
Radio Standards: EN 300 328-1 and -2: 2000-7 Radio Equipment and Systems (RES); Wideband transmission systems; Technical characteristics and test conditions for data transmission equipment operating in the 2.4 GHz ISM band and using spread spectrum modulation techniques	
Safety Standard: EN60950-1: 2001 Safety of information technology equipment, including electrical business equipment	
The product carries the CE Mark:	
	
We, LXE Inc., declare that the equipment specified above complies with all Essential Health and Safety Requirements of the above Directives and Standards, as amended.	
<div style="display: flex; justify-content: space-between;"> <div> Date of issue: November 8, 2005 </div> <div style="text-align: right;">  Cyril A. Binnom Jr. EMC Approvals Engineer </div> </div>	

LXE Inc. 125 Technology Parkway Norcross, GA 30092-2993 USA
 ph. 770/447-4224 fax 770/447-6928



A/C Power Supply Safety Statement – MX7 Output Rated 12 VDC, 1.25 A.



The LXE-approved AC Power Adapter is only intended for use in a 25°C (77°F) maximum ambient temperature environment.



Optional A/C Power Supply:

Outside North America, this unit is intended for use with an IEC certified ITE power supply with output rated as stated at the top of this page. (US)

Alimentation c.a. optionnelle:

Hors de l'Amérique du Nord, cette unité est conçue pour être utilisée avec une alimentation ITE certifiée CEI de sortie nominale indiquée au haut de cette page. (FR)

Valgfrit vekselstrømforsyning

Udenfor Nord Amerika er denne enhed udstattet med en IEC (international elektronisk Kommission) udfærdiget med en ITE strømfor syning med strømdugang som fastslået på denne sides begyndelse. (DK)

Vaihtohehtoinen vaihtovirran syöttölaite:

Pohjois-Amerikan ulkopuolella tämä laite on tarkoitettu käytettäväksi sellaisen IEC:n sertifioiman ITE-tehonsyöttölaitteen kanssa, jonka antoteho on tämän sivun yläosassa esitetyn mukainen. (FI)

Optionales Netzteil (Wechselstrom)

Außerhalb Nordamerikas sollte diese Einheit über ein der IEC-Norm entsprechendes ITE-Netzteil gespeist werden, und zwar mit einer wie oben auf dieser Seite genannten Ausspeisung. (DE)

Προαιρετική Τροφοδοσία Συνεχούς Ρεύματος

Εκτός Β. Αμερικής, η μονάδα αυτή προορίζεται για χρήση με ένα τροφοδοτικό ITE πιστοποιημένο κατά IEC με ονομαστική ισχύ όπως δηλώνεται στην αρχή της σελίδας. (GR)

Alimentazione opzionale a corrente alternata:

Al di fuori dei paesi dell'America del nord, l'unità deve essere impiegata con un dispositivo d'alimentazione per attrezzature informatiche approvato dalla IEC la cui potenza nominale sia pari a quella indicata all'inizio della pagina. (IT)

Vekselstrømforsyning (ekstraustyr):

Utenfor Nord-Amerika skal dette produktet brukes med en IEC-sertifisert ITE-strømforsyning med klassifisert effekt som angitt øverst på denne siden. (NO)

Fornecimento opcional de CA:

Fora dos EUA, esta unidade destina-se a ser usada com dispositivos de fornecimento de corrente ITE com certificação IEC, com a capacidade indicada no topo desta página. (PT)

Suministro optativo de corriente alterna

Fuera de América del Norte, esta unidad se debe utilizar con un alimentador ITE homologado por la IEC (comisión electrotécnica internacional) con una salida que tenga la calificación que figura en la parte superior de esta página. (ES)

Valfri A/C Strömförsörjning

Utanför Nordamerika är det meningen att denna enheten används med en IEC-certifierad ITE-strömförsörjare med den uteffekt som anges längst uppe på den här sidan. (SE)

İsteğe Bağlı A/C Güç Kaynağı:

Kuzey Amerika dışında, bu ünite, çıkış sınıflandırması bu sayfanın başında belirtilen IEC sertifikalı bir ITE güç kaynağı ile birlikte kullanılmak üzere tasarlanmıştır. (TR)

Updated 10/01/2001

Legend: Danish – DK; English – US; Finnish – FI; French- - FR; German – DE; Greek – GR; Italian – IT; Norwegian – NO; Portuguese – PT; Spanish – ES; Swedish – SE; Turkish – TR.



Laser Light Safety Statement



Warning:

This product uses laser light. One of the following labels is provided on the scanner. Please read the Caution statement. (US)

Mise en garde:

Ce produit utilise un rayon laser. L'une des étiquettes suivantes est apposée sur le scanner. Veuillez lire l'avertissement qu'elle contient. (FR)

Advertência:

Este produto usa luz de laser. O scanner contém um dos seguintes avisos. Favor ler o Aviso. (PT)

Varning:

Denna produkt använder laserljus. En av de nedanstående etiketterna sitter på scannern. Var god läs varningstexten. (SE)

Advarsel:

Dette produkt anvender laserlys. En af følgende mærkater anvendes på scanneren. Læs venligst sikkerhedsforanstaltningen. (DK)

Varoitus:

Tämä tuote käyttää laservaloa. Skannerissa on jokin seuraavista tarroista. Lue Huomio-kohta. (FI)

Warnung:

Dieses Produkt verwendet Laserlicht. Eines der folgenden Etiketten befindet sich auf dem Scanner. Bitte lesen Sie den Gefahrenhinweis. (DE)

Attenzione:

Questo prodotto utilizza luce laser. Una delle etichette seguenti c'è ubicata sullo scanner. Si raccomanda di leggere con attenzione le avvertenze riportate. (IT)

Advarsel:

Dette utstyret bruker laserlys. En av følgende etiketter er plassert på scanneren. Les advarselen på etiketten. (NO)

Advertencia:

Este producto usa luz de láser. Las etiquetas se proveen en la máquina exploradora. Por favor, lea detenidamente la explicación para las precauciones. (ES)

Waarschuwing:

Dit product gebruikt laserlicht. Een van de volgende labels is op de scanner aangebracht. Lees a.u.b. de waarschuwing onder Oppassen. (NL)

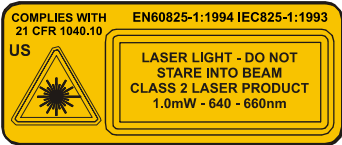











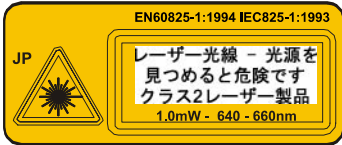

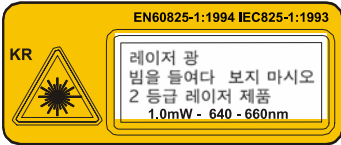



Laser Light Safety Statement



















<p>Uyarý:</p> <p>Bu ürün lazer ýbýdý kullanýr.</p> <p>Αραδýdaki etiketlerden bir tanesi tarayýcýnýn üstünde sađlanýr.</p> <p>Lütfen Dikkat ifadesini okuyun. (TR)</p>	<p>Προειδοποίηση:</p> <p>Αυτό το προϊόν χρησιμοποιεί λέιζερ φως.</p> <p>Υπάρχει μία από τις ακόλουθες ετικέτες στο σαρωτή.</p> <p>Παρακαλούμε διαβάστε τη δήλωση με τίτλο Προσοχή. (GR)</p>
<p>경고:</p> <p>본 제품은 레이저 광선을 사용합니다.</p> <p>다음 라벨 중 하나가 스캐너에 제공됩니다.</p> <p>주의 사항을 읽어 주십시오. (KR)</p>	<p>警告:</p> <p>この製品はレーザー光線を使用します。</p> <p>次のラベルのうち1つがスキャナーに貼られています。</p> <p>注意事項をお読みください。 (JP)</p>
<p>警告:</p> <p>本产品使用激光。</p> <p>下列一个标签将随扫描仪一道提供。</p> <p>请阅读“当心”一栏的内容。(CN)</p>	<p>Legend:</p> <p>Chinese-CN; Danish-DK; Dutch-NL; English-US; Finnish-FI; French-FR; German-DE; Greek-GR; Italian-IT; Japanese-JP; Korean-KR; Norwegian-NO; Portuguese-PT; Spanish-ES; Swedish-SE; Turkish-TR</p>

Labels – MX7 Hand Held Computer [Odyssey Client]

ENGLISH			FRENCH
DANISH			GERMAN
GREEK			ITALIAN
NORWEGIAN			SPANISH
TURKISH			DUTCH
SIMPLIFIED CHINESE			PORTUGUESE
JAPANESE			SWEDISH
KOREAN			FINNISH

Labels – MX7 Hand Held Computer [Summit Client]

ENGLISH	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001 COMPLIES WITH 21 CFR 1040.10 AND 1040.11</p> <p>LASER LIGHT - DO NOT STARE INTO BEAM CLASS 2 LASER PRODUCT 1.0mW - 630 - 680nm</p>	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>RAYONNEMENT LASER NE PAS REGARDER DANS LE FAISCEAU APPAREIL A RAYONNEMENT LASER DE CLASSE 2 1.0mW - 630 - 680nm</p>	FRENCH
DANISH	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>LASERLYS KIG IKKE IND I LYSSTRÅLEN KLASSE 2 LASER PRODUKT 1.0mW - 630 - 680nm</p>	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>LASERSTRAHLUNG NICHT IN DEN STRAHL BLICKEN. LASER KLASSE 2 1.0mW - 630 - 680nm</p>	GERMAN
GREEK	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>ΠΗΓΗ ΦΩΤΟΣ LASER ΜΗΝ ΚΟΙΤΑΤΕ ΤΗΝ ΔΕΞΜΗ ΠΟΡΘΟΝ LASER ΚΛΑΣΗΣ 2 1.0mW - 630 - 680nm</p>	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>RADIAZIONE LASER NON FISSARE IL FASCIO APPARECCHIO LASER DI CLASSE 2 1.0mW - 630 - 680nm</p>	ITALIAN
NORWEGIAN	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>LASER LYS IKKE SE INN I STRÅLEN KLASSE 2 LASER PRODUKT 1.0mW - 630 - 680nm</p>	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>LUZ DE LASER - NO MIRE DIRECTAMENTE AL HAZ DE LUZ PRODUCTO. LASER DE LA CLASE 2 1.0mW - 630 - 680nm</p>	SPANISH
TURKISH	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>LASER RADYASYON IŞINA DOĞRU BAKMAYIN. CLASS 2 LASER ÜRÜNÜ 1.0mW - 630 - 680nm</p>	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>LASERBESTRALING NIET IN DE LICHTSTRAAL STAREN. KLASSE 2 LASER PRODUCT 1.0mW - 630 - 680nm</p>	DUTCH
SIMPLIFIED CHINESE	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>激光辐射 - 勿直视光束 2类激光产品 1.0mW - 630 - 680nm</p>	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>LUZ DE LASER NÃO OLHE NO RAI PRODUTO DE LASER DE CLASSE 2 1.0mW - 630 - 680nm</p>	PORTUGUESE
JAPANESE	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>レーザー光線 - 光源を見つめると 危険です。クラス2レーザー製品 1.0mW - 630 - 680nm</p>	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>LASERSTRÅLNING STIRRA EJ IN ISTRÅLEN. LASERPRODUKT KLASSE 2 1.0mW - 630 - 680nm</p>	SWEDISH
KOREAN	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>레이저 라이트 - 빛을 바로 쳐다보지 마십시오. 2출 레이저 상품 1.0mW - 630 - 680nm</p>	 <p>AVOID EXPOSURE - LASER RADIATION IS EMITTED FROM THIS APERTURE.</p> <p>EN60825-1:1994+A1:2002+A2:2001 IEC60825-1:1993+A1:1997+A2:2001</p> <p>VAARA LASERSÄTEILYÄ ÄLÄ TUUJOTA SÄTEESEEN. LUOKAN 2 LASER 1.0mW - 630 - 680nm</p>	FINNISH

Revision History

Revision H, May 2008

- Introduction - Added *Continuous Scan Mode*.
- Quick Start - Accessories -- Added Cold Storage battery. Added Back of Hand Bluetooth Ring Scanner.
- MX7 Hand Held Computer - Added *MX7 Cold Storage*. Added *Mobile Bluetooth Accessories* after *Bluetooth Devices* section that contains brief pairing instruction.

Revision G, October 2007

- Accessories: Added Mobile Bluetooth barcode readers.

Revision F, May 2007

- Entire Manual : Added Bluetooth information and instruction. Added Keypad backlight information and instruction. Added reference to MX7 Cradle Reference Guide.
- Quick Start : Updated Accessories.
- MX7 Hand Held Computer : Removed *Passive Vehicle Cradle*. Added section titled *MX7 Cradles*.

Revision E, Feb 2007

- Notices : Updated MX7 specific trademark statements.
- Quick Start : Added 2D Imager instruction.
- Appendix B : Added 4830 (Summit) Declaration of Conformity.

Revision D, Sep 2006

- Notices : Added Wavelink Avalanche trademark statement.
- Quick Start : Expanded instruction for external power supply to emphasize that 3 prong outlet must be plugged into wall outlet before power cable is connected to the MX7.
- Appendix B – Regulatory Notices and Safety Information : Added “Revision History” section.

Revision C, Aug 2006

- Introduction : Added Laser Label for Summit Client . Laser Label for Odyssey Client does not change.
- Quick Start : Added section titled “MX7 Features”. Added figure titled “MX7 Desktop.” Added Multi AppLock activation key instruction “Entering the Multi AppLock Activation Key”. “Installing Trigger Handle”: Added: “*Equipment Needed*: Torque wrench capable of torquing to 3±1 in/lb (.34± .11 N/m)”. Removed “and washers” from step 5 and included torque instruction in step 6. Expanded instruction when using audio cable and headsets “Connecting the Audio Cable and a Headset”. Added note about SE 824 scanner and it’s SE 955 replacement effective July 2006. Added note to LXE Login Utility: “Should only be used with Odyssey Clients”. Accessories: Added ROHS indicators. Added Voice accessories. Removed MX7A309PSACWW. Added 9000A302PSACWW – AC/DC power supply, int’l, no power cord.
- Appendix B – Regulatory Notices and Safety Information : Added Summit Radio to Approvals section. Added Laser Labels for Summit Client Mobile Device. Laser labels for Odyssey Client do not change.
- Entire Manual : Removed all reference to Bluetooth except to state that Bluetooth is not supported by LXE.

Revision B, May 2006

- Notices and Appendix B – Regulatory Notices and Safety Information : Added label and text : “Republic of Singapore – LXE Dealer License Number DA103458 complies with IDA Standards.”

Revision A, Initial Release, Dec 2005

Index

2D Imager	26
2nd key function, described	45
32-key Keymap	61
55-key Keymaps	55

A

AC External Power Supply, How to	18
AC Power	
and LEDs on multicharger	50
AC Power Adapter	
Assembly	18
AC Power Scheme	39
Accessories	
Electrostatic Discharge	11
Installing	11
Activation Key	
AppLock	16
Alph key	
Enter a string of letters in a text field	46
Alpha Mode LED	43
Alt key function	44
Alt sticky keypress	44
ANSI CE Keypad	22
Assemble	
RS232 connection	19
USB connection	19
Audio Cable	
Install	20
Audio Volume settings	40

B

Backlight timer	38
Battery	
Charge New	11
Check status	14
Important	3
Battery Multi-Charger	49
Battery Power Scheme	39
Battery, Backup	
described	48
Battery, Main	47
described	47
Battery, replace	13
Bluetooth printers and scanners	29

C

Cable	
Printer connection	20
Cables	33
Calibrate touch screen	37
CapsLock key sequence	45
CapsLock mode function	45
Change the Time and Date	11
Charger, battery	49
Cleaning	37
Cold reset, How to	35
Cold Storage	52
Color Display	36
Color displays and backlight timers	38
Components	6
Connect External PS	18
Contact LXE	30
Continuous Scan Mode	5
Control sticky keypress	44
Cradle Accessories	33
Ctl key function	45
Ctrl key function	44

D

Data entry	
imager	26
keypad	24
laser scanner	26
stylus	25
virtual keyboard	24, 28
Data entry	24
Display	36
Backlight brightness	38
Display and scanner aperture cleaning	37
Display backlight timer	38

E

Enter key function	44
Entering Data	24
Environmental Specifications	4
External PS	18

F

Features.....	1
Field Exit key function	45
Forms entry.....	24
Function	
2nd Key.....	45
Alt Key.....	44
CapsLock Mode.....	45
Ctl Key.....	45
Ctrl Key.....	44
Enter Key	44
Field Exit Key.....	45
Shift Key	44
Spc Key.....	44
Function keys.....	44

G

Getting Started.....	11
----------------------	----

H

Handstrap, installation	17
Headset, Install	20
Help	30
Hotswapping	
cautions	48

I

IEC IP65	4
Input panel	
virtual keyboard	24, 28

K

Key	
Alpha.....	44
Diamond.....	44
Enter.....	44
Numeric	44
Scan.....	44
Space.....	44
Key functions.....	44
Keypad	
and entering data	24
keypad LED backlight	42
Keypad Shortcuts.....	15
Keypad, 32 Key	23

L

Lithium-Ion (Li-ion)	47
----------------------------	----

M

Microphone adjustment	21
Mode Key Functions.....	45
Mode timers	39
MX7 Cold Storage.....	52

N

New Battery	11
-------------------	----

O

Operating Temperature	4
Orange and Blue sticky keypresses.....	45

P

Pen Stylus	15
Pen Stylus and data entry.....	25
Power key	14
Power Scheme	39
Protective Film	36
Putting it all Together	76

Q

Quick Start Instructions	11
--------------------------------	----

R

Reboot, How to	35
Recalibrate	16, 37
Registry and save settings.....	35
Regulatory Notices	67

S

Safety Information	67
Save settings	35
Scan Status LED.....	43
Scanning and data entry	26
Scanning status, LED.....	27
Scheme.....	39
Screwdriver	
Phillips, for handstrap	17

Shift key function	44
Shift keypress and sticky keys	44
Sound Scheme	41
Space key function.....	44
Specifications	
Environmental.....	4
Sticky Key	44
Stylus	15
Stylus and data entry.....	25
Suspend mode, How To.....	14
Suspend Timer.....	39
Switch applications	
Multi AppLock.....	16
System Idle Timer.....	39
System Status LED	43

T

Technical Glossary	30
Tethered scanners	27, 33
Timer	
User, System, Suspend.....	39
Touch Screen	15, 36
Touch Screen and data entry.....	25
Touch Screen and Keypad Shortcuts	15
Touch screen calibration.....	16
Troubleshooting	

Startup	12
---------------	----

U

User Idle Timer.....	39
----------------------	----

V

Virtual keyboard	
Input panel	24, 28
Voice data	27
Voice data entry	21
Volume	
adjust audio volume	40

W

Warm reset, How to	35
Warnings and Labels	
Laser Scanner.....	5, 26
When the backup battery power is Low or Very	
Low	48
Wireless communication.....	51

